

Deluxe Shave-A-Doo

Instruction Manual

Model Mo. 1840



 **GOLD MEDAL®**

FUNFOOD EQUIPMENT AND SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

	<p style="text-align: center;">⚠ DANGER</p> <p>Machine must be properly grounded to prevent electrical shock! DO NOT immerse the equipment in water. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing.</p>
	<p style="text-align: center;">⚠ WARNING</p> <p>Never put your fingers or any object into the shaver body (the goose-neck) while the motor is running. Serious injury may occur. <i>(Gold Medal Products does not assume any liability for injury due to careless handling and/or reckless operation of this equipment).</i></p>
	<p style="text-align: center;">⚠ WARNING</p> <p>Always wear safety glasses when servicing this equipment.</p>
	<p style="text-align: center;">⚠ WARNING</p> <p>Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment.</p>
	<p style="text-align: center;">⚠ CAUTION</p> <p>This equipment is designed and sold for commercial use only. This equipment is not to be used by the consumer in home use. Do not allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all installation instructions before operating the equipment.</p>
	<p style="text-align: center;">⚠ CAUTION</p> <p>This machine is not to be operated by minors. A minor is anyone under the age of 18</p>

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INSTALLATION INSTRUCTIONS

INSPECTION OF SHIPMENT


Unpack all cartons and check thoroughly for any damage that may have occurred during transit. Damage claims should be filed immediately with the transportation company.

SETUP

Your new *Deluxe Shav-A-Doo* is completely assembled and tested at the factory. Remove all packing material and tape before starting operation.

ELECTRICAL REQUIREMENTS

The following power supply must be provided: 120 VAC, 60 Hz. 15 Amp Fused Circuit

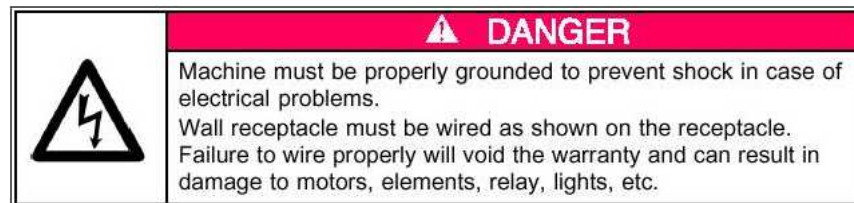

Your electrician must furnish sufficient power for proper machine operation. We recommend this shaver be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine.

It is **Gold Medal®** Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance.

BEFORE YOU PLUG IN THE MACHINE

1. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
2. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
3. **DO NOT** use a grounded to un-grounded receptacle adapter.



GENERAL INSTRUCTIONS

SHAVE-A-DOO OPERATION

1. Load hopper with Ice.
2. Close pusher handle, and apply gentle downward pressure.
3. Turn on the power switch.
4. Press and hold in the "Push to shave ice" button. Release the button once all of the ice has been shaved.
5. Do not lift the pusher handle until the motor is off and the shaver head has stopped.

NOTE: Never allow any foreign or metallic objects around the shaver area of the *Shav-A-Doo*. Ice picks, scoops, and debris that may be in the ice often damage blades.

ICE REQUIREMENTS

The *Shav-A-Doo* can take ice cubes or block ice, if you break the block into pieces approximately 3 to 4 inches in size.

NOTE: The ice will not enter the shaving chute if the pieces are too large.

CLEANING THE ICE SHAVER-DAILY

1. Wipe the aluminum parts with a clean cloth and cleaner designed for aluminum. **DO NOT use oven cleaners, as they will damage parts of the machine.**
2. Ammonia cleaners will damage the Lexan Windows. Use only non-ammonia cleaners, such as **Gold Medal®** Watchdog Glass Cleaner (item number 2588).


INSTALLING NEW SHAVER BLADES

MAKE SURE TO UNPLUG THE MACHINE FIRST. After having unplugged the machine, inspect your equipment before replacing the blades. Use a flashlight to examine the blades in the shaver body. If the blades appear to be nicked or bent, then the blades should be replaced.

FOLLOW THIS PROCEDURE

1. Unplug the main power supply cord from the electrical outlet.
2. Remove the shaver head from the motor shaft by loosening the allen head set screws. (Access to the set screws may be between the hopper and motor or from the underside opening of the hopper inside the cabinet).
3. Remove the shaver head. Pull the shaver head off of the motor shaft and through the hopper. If the shaver head is frozen onto the shaft, remove the hold down bolts on the motor. Pull the motor back, trapping the shaver head against the inside of the hopper, until the shaver head disengages.
4. After removing the shaver head, check the motor shaft for burrs and corrosion. Use a fine tooth file to remove the burrs and corrosion.
5. Remove the blades from the shaver head. These blades may be re-sharpened, but it is far better to replace the old blades with a new set.
6. Position the new blades and insert screws until they are finger tight.
7. Set the blade thickness equal to a dime. (See illustration below.) Make sure that the height is even across the shaver head.
8. Tighten the blade screws completely. Check the blades again with a dime to ensure the blades did not move while tightening the screws.
9. Replace the motor and shaver head. Mount the motor using the hold down bolts. Insert the shaver head through the hopper and onto the motor shaft. Press the shaver head onto the motor shaft with the pusher handle, and then move the shaver head in another 1/8". Check that the shaver head is not rubbing against the back of the hopper and the blades are not touching the pusher handle or sides of the hopper.
10. Tighten the set screws in the shaver head.

NOTE: Replace the shims that were between the motor base and the mounting surface.

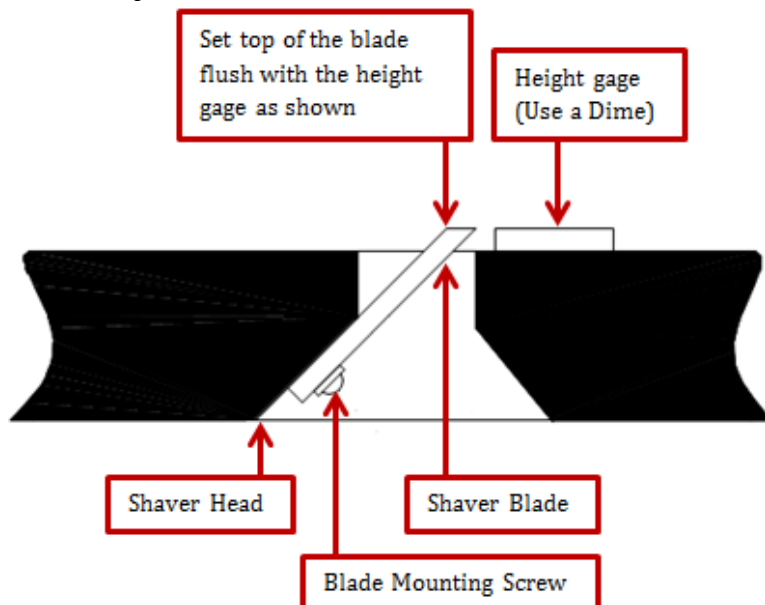

MAINTENANCE INSTRUCTIONS

	<div data-bbox="367 340 1507 405"> WARNING</div> <p data-bbox="383 443 1377 527">Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.</p>
	<div data-bbox="367 611 1507 676"> CAUTION</div> <p data-bbox="383 714 1484 877">THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.</p>
	<div data-bbox="367 947 1507 1012"> DANGER</div> <p data-bbox="375 1064 1451 1136">DO NOT immerse this machine in water! Unplug your machine before servicing or cleaning.</p>



ORDERING SPARE PARTS

1. Identify the worn or broken part by checking it with the illustrations and parts list.
2. When ordering parts, include part number, part name, and quantity required.
3. Include your model name and machine serial number (found on nameplate) with your order.
4. Address orders to:


Parts Department
Gold Medal® Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or place orders at:

(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com
www.gmpopcorn.com



PARTS BREAKDOWN

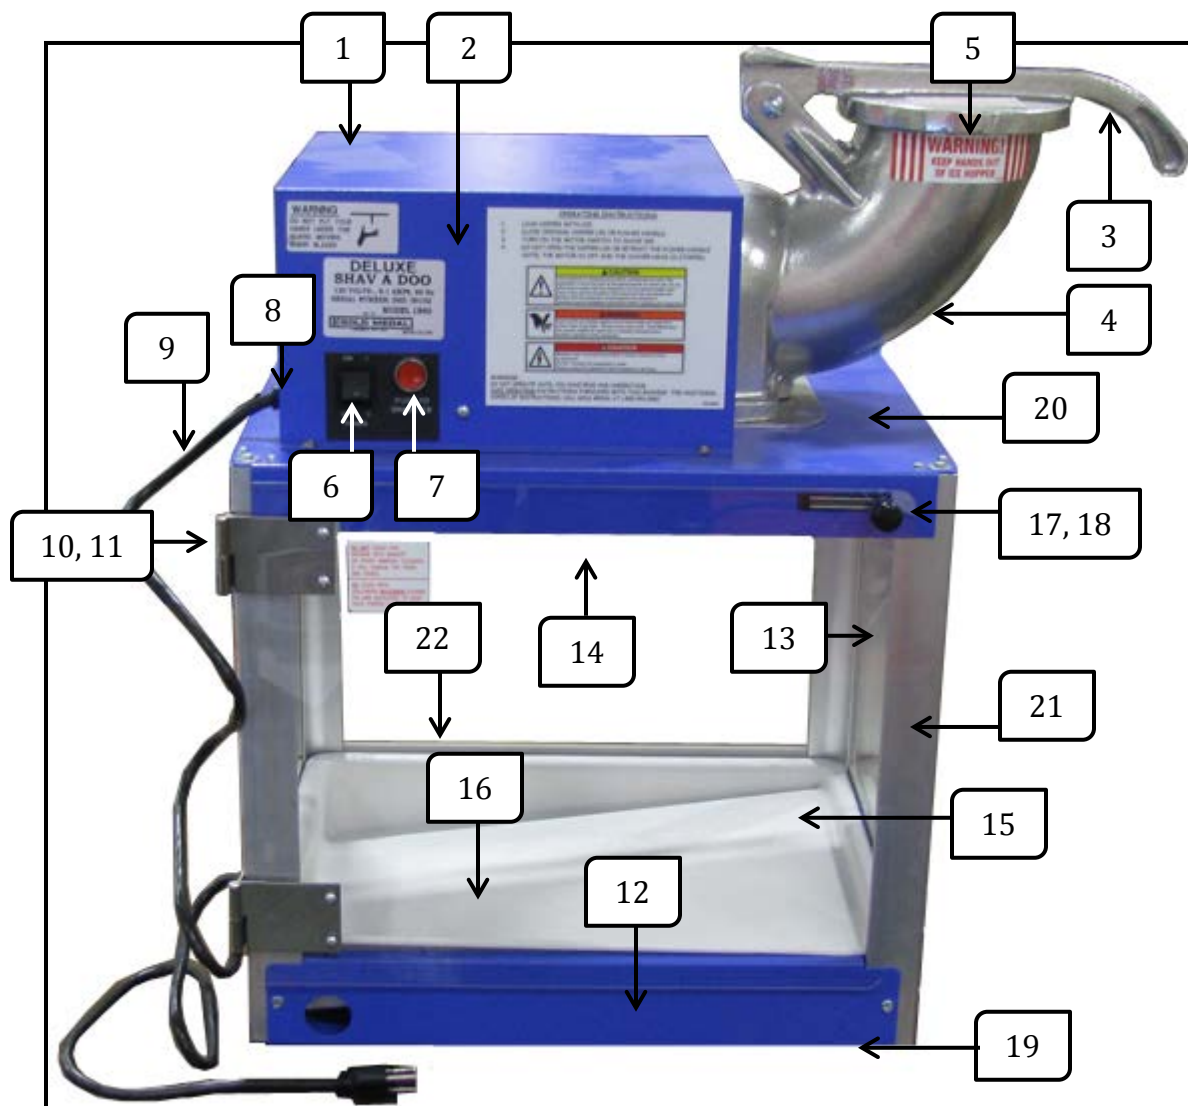


Number	Part No.	Description	Quantity
1	61111B	Motor Cover	1
2	12456	Drive Motor (Inside Cover)	1
3	22005	Pusher Handle	1
4	22009	Hopper Casting	1
5	22014	Pusher Gasket	1
6	42798	Lighted Rocker Switch	1
7	38971	Momentary Switch	1
8	76026	Strain Relief	1
9	22038	Lead-In Cord, 15A Plug	1
10	61359	LH Female Hinge	2
11	41349	Male Hinge Short Left	2
12	22702	Base Pan	1

Number	Part No.	Description	Quantity
13	22705	Glass Side	2
14	22706	Glass Front	1
15	23235	Door 1203	1
16	22701	Snow Pan	1
17	47120	Knob Lid Left	1
18	47561	Magnetic Catch	1
19	87247	Rubber Bumper Foot	4
20	22708	Motor Plate	1
21	55083	Glass Channel Vinyl	4
22	55082	Glass Channel 12.465	6
23	12538	Decal (Not Shown)	1

SHAVER HEAD AND ACCESSORIES


Part No. 22015

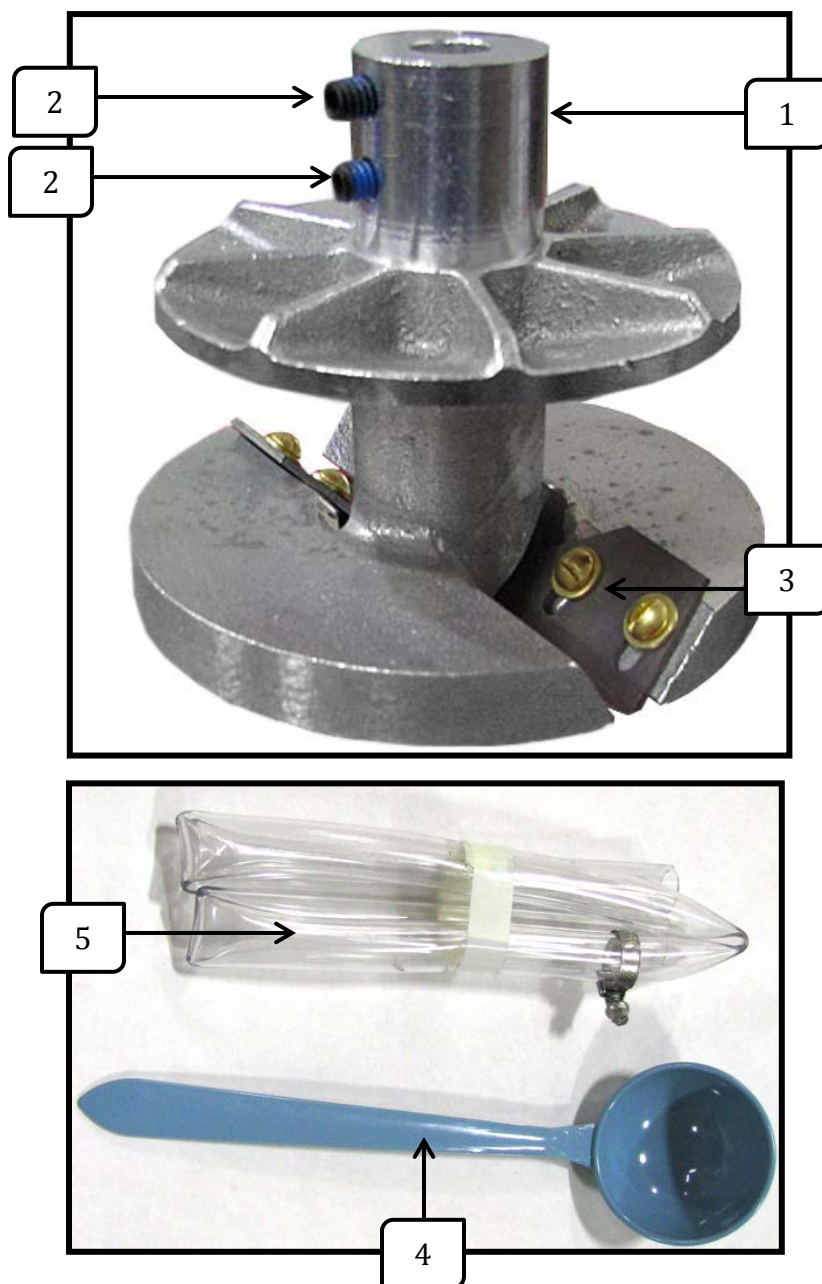

Item	Part No.	Description	Quantity
1	22015	Shaver Head	1
2	74127	5/16 x 3/8 Set Screw	2
3	22017	2 Hole Blade Replacement Set (With Screws)	1
4	1088	Plastic Dipper (Accessory)	1
5	12159	Drain Hose	4'

WIRING DIAGRAM

Model No. 1840

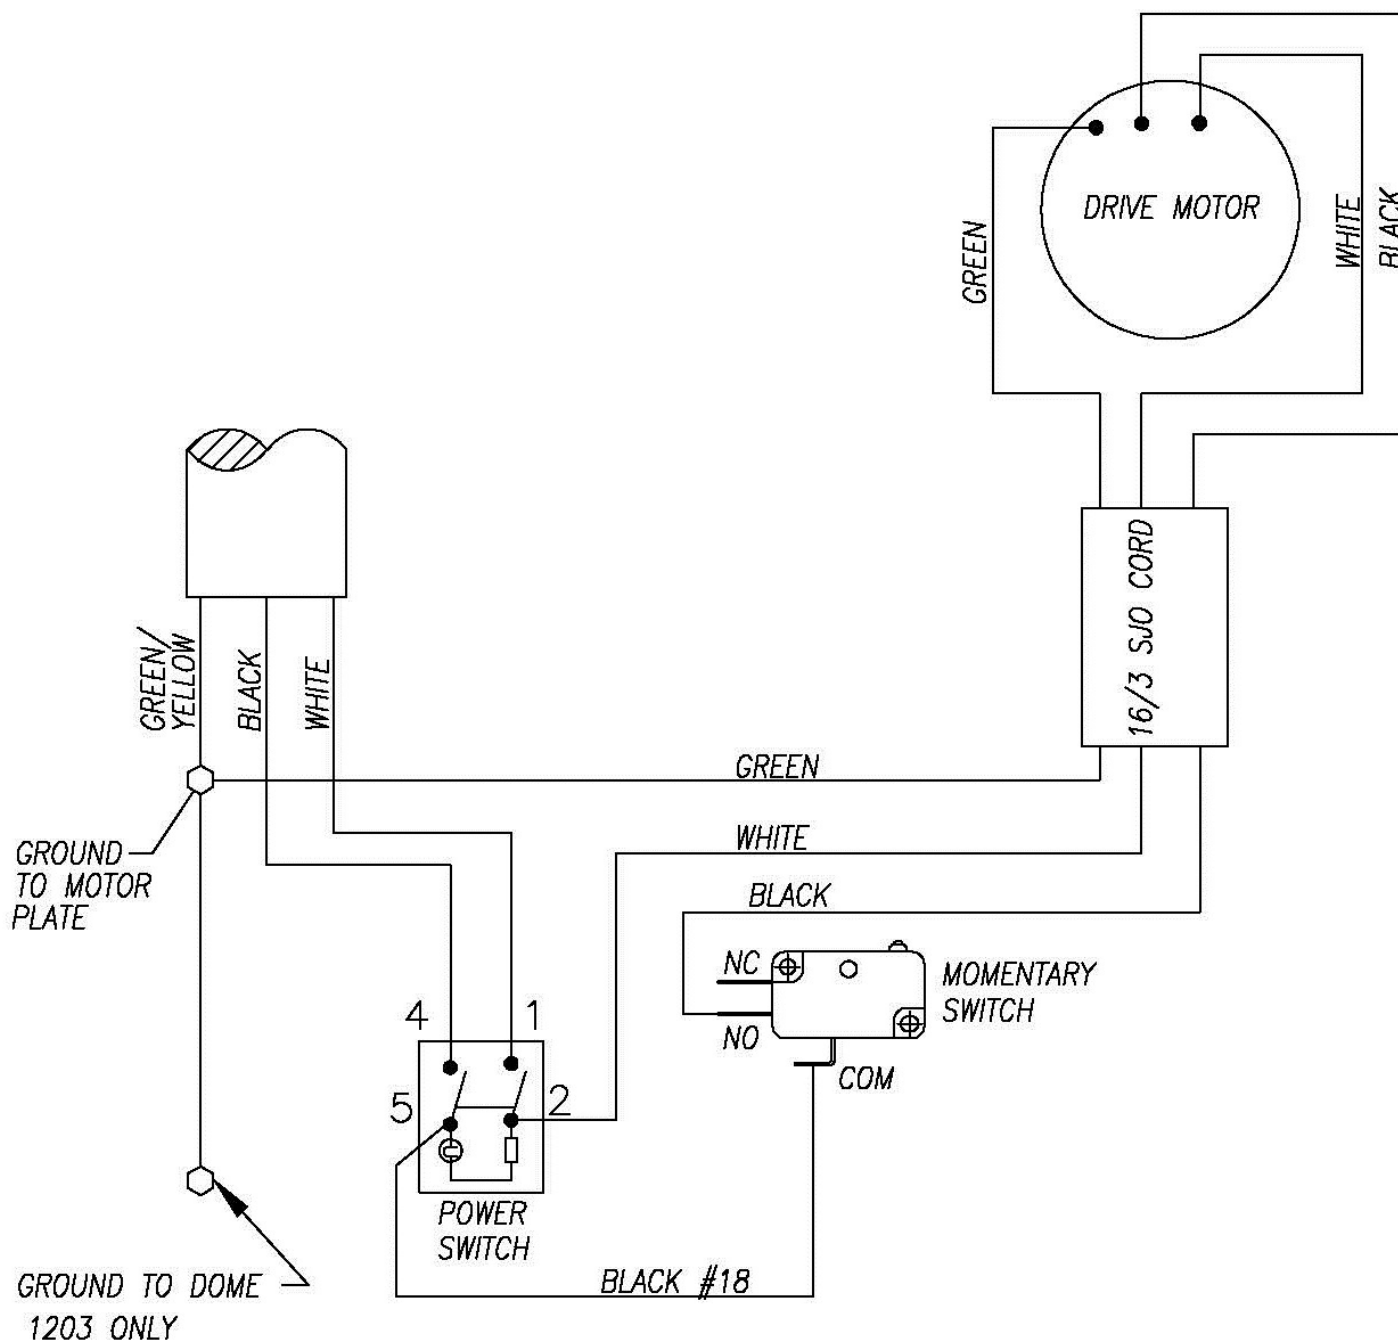

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, Ohio 45241-4807 USA