Countertop B.I.B. Butter Dispenser

Instruction Manual Model #2496





FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS



A DANGER

Machine must be properly grounded to prevent electrical shock to personnel.

Do NOT immerse the equipment in water.

Always unplug the equipment before cleaning or servicing.



A WARNING

NEVER put your fingers or any object into the heating area. We do NOT assume any liability for injury due to careless handling or operation of this equipment.



A WARNING

ALWAYS wear safety glasses when servicing this equipment.



WARNING

Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.



A CAUTION

Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.



A CAUTION

This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

Improvements are always being made to Gold Medal Products equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal Products technical service department at 1-800-543-0862 for any questions about machine operations, replacement parts, or any service questions.

Installation Instructions

Checking Shipment

Unpack all cartons and check thoroughly for any damage, which may have occurred during transit. Damage claims should be filed immediately with the transportation company.

Electrical Requirements:

The following Power Supply must be provided:

120 Volts, 60Hz, 3.5 Amps, 420 Watts



DANGER

Machine must be properly grounded to prevent shock in case of electrical problems.

Wall receptacle must be wired as shown on the receptacle. Failure to wire properly will void the warranty and can result in damage to motors, elements, relay, lights, etc.

Your electrician must furnish sufficient power for proper machine operation. We recommend this Butter dispenser be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine.

It is Gold Medal Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended. They may cause sacrificed and/or reduced performance and can become a safety hazard.

Before You Plug In Machine:

- 1. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
- 2. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.

3

3. **DO NOT** use a grounded to un-grounded receptacle adapter.

Operating Instructions

The Model 2496 Countertop B.I.B. is a front-loading, self-serve, counter butter dispenser. It utilizes the Bag-In-A-Box system for product dispensing. The nozzle height will accommodate all of today's popcorn

bags, boxes and tubs. The heated cabinet maintains the topping at 135 degrees Fahrenheit.

Set the Model 2496 on the counter. Open the front to install the bag-in-a-box product. Place the bag-in-a-box vertically, with the opening for the quick-disconnect fitting at the bottom. Connect the fitting located on the back side of the door to the bag-in-a-box. Close the door and turn on the power switch located on the left-hand side of the door. Allow approximately one hour for product to reach serving temperature if starting with room temperature product. (HINT: Use one of Gold Medal Products back room warmers to pre-heat the topping boxes prior to use.)

Controls And Their Functions

The main power switch is located on the left side of the front door.

The push button located on the nozzle is the topping dispense button. Press and hold this button to dispense the desired amount of topping.

Care And Cleaning

Sanitizing Instructions

Your Model 2496AD is all stainless steel construction. The exterior surface can be cleaned by wiping oil spills with a dry towel, then wiping with another towel moistened with mild soap and warm water.

Sanitizing the internal parts; tubing, pump, etc.

- 1. Disengage the bag connector from the bag of oil and place it in a pail of hot water and mild soap; approximately 1 gallon.
- 2. Push the dispense button to flush the system of oil. Make sure you have a container under the discharge tube before you discard the oil.
- 3. Put the intake line in the hot water and pump it through the lines by holding the dispense button until the pail is empty.
- 4. Fill the pail with a sanitizing solution. Gold Medal offers a product for this purpose, Chlor-Tech, part number 1109. Put the bag connector in the pail of sanitizer. Pump it through the lines by holding the dispense button until the pail is empty. It is not necessary to flush the sanitizer before the next step, but you may flush with water if desired.
- 5. Before the next use, install the connector to a bag of oil and pump oil until oil is dispensed through the discharge tube.

4

Schedule for Cleaning

The recommended sanitizing schedule is every night.

Important:

This product is not intended for use with volatile food products, i.e. real butter.

MAINTENANCE INSTRUCTIONS



A DANGER

Do NOT immerse the equipment in water. Unplug your machine before servicing.



A WARNING

Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.



A CAUTION

THE FOLLOWING SECTIONS OF THIS MANUAL ARE IN-TENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

ORDERING SPARE PARTS

- * Always speak to a Gold Medal Products Technical Service Advisor before ordering any parts to help ensure accuracy for your product. Included diagrams may not be the latest information.
 - 1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
 - 2. When ordering, please include part number, part name, and quantity needed.
 - 3. Please include your model name, serial number, and date of manufacture (located on the machine nameplate) with your order.
 - 4. Address all parts orders to:

Parts Department Gold Medal Products Co. 10700 Medallion Drive Cincinnati, Ohio 45241-4807

Or, place orders by phone or online:

(800) 543-0862 (513) 769-7676 Fax: (513) 769-8500

E-mail: info@gmpopcorn.com
Web Page: www.gmpopcorn.com




Item	Part No.	Description
1	38971	Momentary Switch
2	39142	Dispenser Label
3	38566	No Drip Spout
4	39179	Decal
5	38936	Drip Pan
6	38938	Drip Pan Insert Weldment
7	77890	Spout Indicator
	77891	Arrow Label




Item	Part No.	Description
1	49138	Hinge, Left Hand Female
2	49140	Hinge, Right Hand Male
3	49141	Hinge, Left Hand Male
4	49139	Hinge, Right Hand Female
5	79341	Fuse
6	74636	Fuse Holder
7	42532	Switch, DPST Rocker
8	22038	Lead-In Cord, 15 Amp
9	76026	Strain Relief
10	39175	Aluminum Tube

8

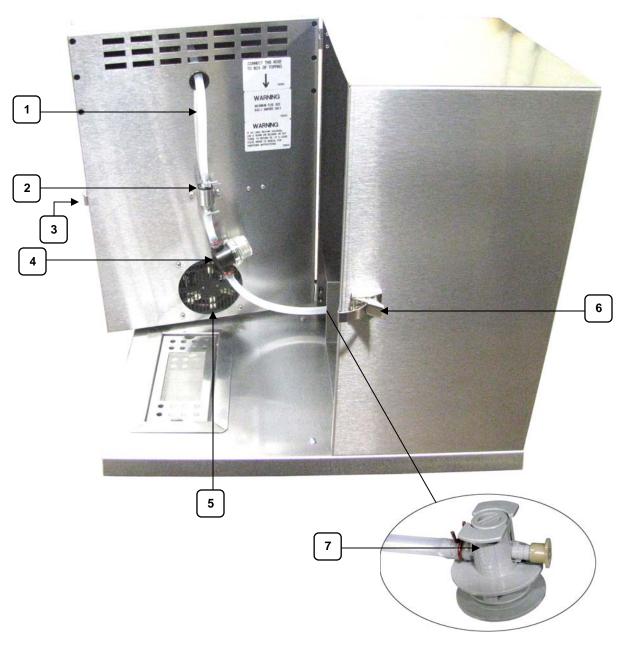


Item	Part No.	Description
1	91375	Tubing (sold by the foot)
2	67843	Hose Clamp (x3)
	75110	Single Wire Hose Clamp (x3)
3	46304	Draw Latch
4	79269	In Line Strainer
5	47200	Finger Guard
6	46034	Keeper

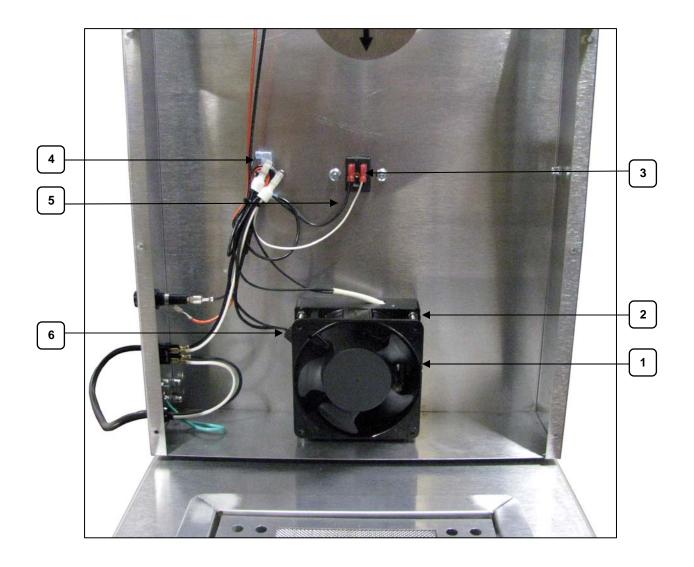

Item	Part No.	Description
1	48018	Exhaust Blower
2	38824	Heat Element 250W, 120V
3	79888	B.I.B. Butter Pump
4	38990	Thermostat 135°F
5	55443	150 Ohm Resistor and Diode Wire Assy.
6	47199	Blower Plug & Cord

Electrical Schematic

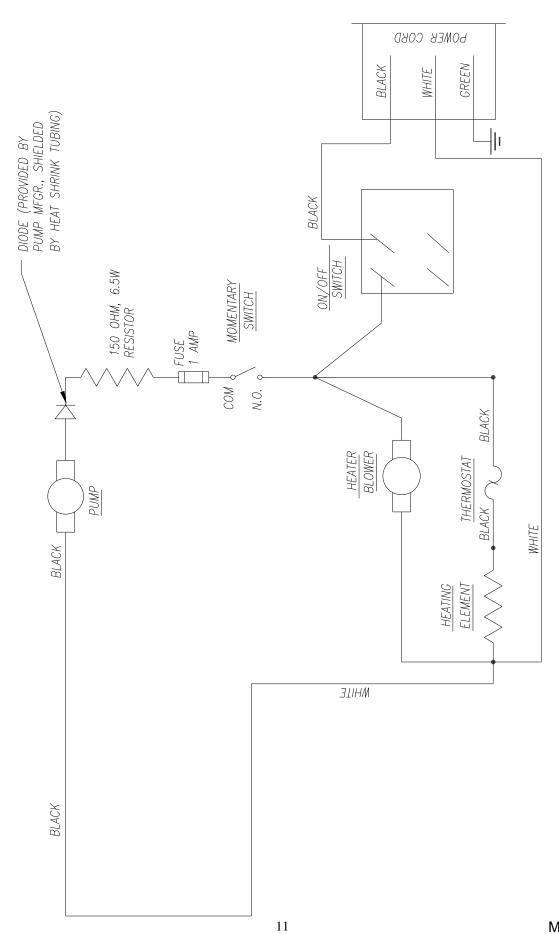

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTIBILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.



GOLD MEDAL PRODUCTS COMPANY 10700 Medallion Drive Cincinnati, Ohio 45241-4807 USA www.gmpopcorn.com

Phone: 1-800-543-0862 Fax: 1-800-542-1496

© The text, descriptions, graphics and other material in this publication are the proprietary and exclusive property of Gold Medal Products Company and shall not be used, copied, reproduced, reprinted or published in any fashion, including website display, without its express written consent.