

FunPop CART

Assembly Manual

Model # 2669CL



 **GOLD MEDAL**®

FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.
	 WARNING ALWAYS wear safety glasses when servicing this equipment.
	 WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.
	 CAUTION Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.
	 CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

OPENING THIS CARTON

Checking Shipment

Unpack carton and check thoroughly for any damage, which may have occurred during transit. Damage claims should be filed immediately with the transportation company.

CARE AND CLEANING

Cleaning the cabinet of your cart is easy. Take a clean cloth and wipe excess grease.



ORDERING SPARE PARTS

1. Identify the desired part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity desired.
3. Please include your model name and machine serial number (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807


or, place orders at:
(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com
Web Page: www.gmpopcorn.com

PARTS INCLUDED IN THIS CARTON

<u>PART NUMBER</u>	<u>QTY</u>	<u>DESCRIPTION</u>
58100BU	1	CABINET (BLUE)
49771BU	1	SHELF (BLUE)
77694	2	WHEELS – 20 INCH
58131BU	2	LEGS WITH AXLE HOLE
58130BU	2	LEGS WITHOUT AXLE HOLE
43491	2	LEG SUPPORT BRACKET
57090	1	AXLE
54099	2	LEVELING FEET
<u>HARDWARE</u>		
42361	16	1/4" NUT WITH NYLON INSERT
82263	6	1/4" X 1" HEX HEAD SCREW
82437	10	1/4" X 1 3/4" HEX HEAD SCREW
10000	24	1/4" FLAT WASHER
83223	2	5/8" NUT (FOR WHEEL AXLE)

ASSEMBLY INSTRUCTIONS


1. SET THE CABINET ON THE FLOOR – TOP SIDE UP
2. ATTACH THE SHELF USING (4) 1" SCREWS, (4) NUTS, (4) WASHERS PUT THE WASHERS UNDER THE NUTS. TIGHTEN THEM BY HOLDING THE SCREW STATIONARY AND TURNING THE NUT WITH A WRENCH OR RATCHET. THIS WILL PREVENT THE SCREW FROM SCRATCHING THE CABINET.\

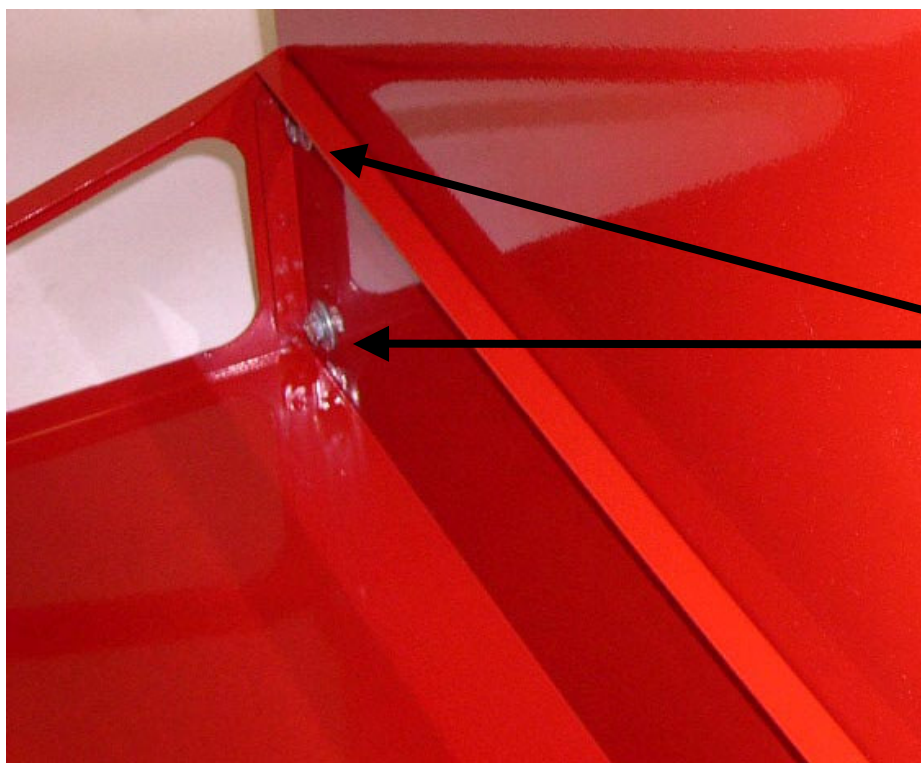

INSERT BOLTS ,
WASHERS , AND LOCK
NUTS.

3. TURN THE CABINET/SHELF UP-SIDE DOWN

4. **PRE-ASSEMBLE THE LEGS/AXLE ASSEMBLY.** ASSEMBLE LOCK NUT ONTO AXLE AS SHOWN BELOW, TIGHTEN NUT TILL IT BOTTOMS OUT ON THE THREADS. SLIDE ON CART LEG (WITH AXLE HOLES), REPEAT FOR OTHER SIDE.
- 5.

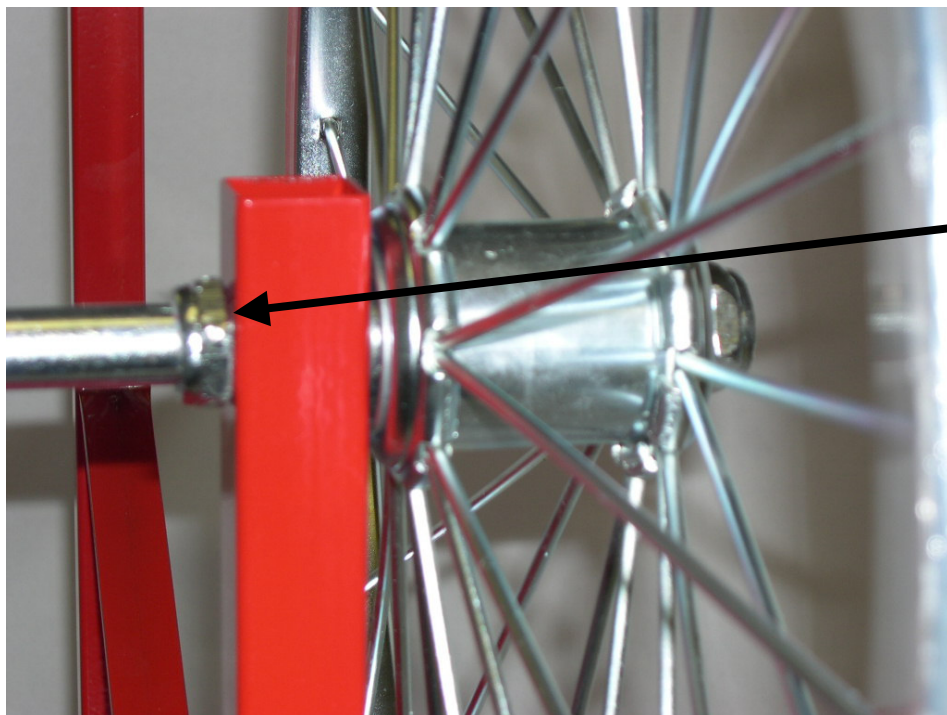

INSTALL LOCK NUT,
TIGHTEN NUT TILL
BOTTOM OUT ON
THREADS

6. ASSEMBLE THE LEG / AXLE ASSEMBLY (WITHOUT WHEELS) TO THE CABINET ON THE SIDE OPPOSITE THE SHELF. USE (4) 1 3/4" SCREWS, (4) NUTS, (4) WASHERS PUT THE WASHERS UNDER THE NUTS. TIGHTEN THEM BY HOLDING THE SCREW STATIONARY AND TURNING THE NUT WITH A WRENCH OR RATCHET.
7. WITH THE AXLE / LEG ASSEMBLY INSTALLED ON TO THE CABINET, SLIDE THE WHEELS ONTO THE AXLE, INSTALL LOCK NUTS AND TIGHTEN THE 5/8" NUTS ENOUGH TO TAKE UP CLEARANCE. DO NOT OVER TIGHTEN OR YOU MAY BEND THE LEGS.

8. ASSEMBLE THE FRONT LEGS (WITHOUT AXLE HOLES) TO THE CABINET ON THE SIDE OF THE SHELF. USE (4) 1 3/4" SCREWS, (4) NUTS, (4) WASHERS.



9. INSTALL THE LEG SUPPORT BRACKET TO THE LEGS USING 1 3/4" BOLTS AND CABINET USING THE 1" BOLTS, PLACING WASHERS ON EACH SIDE. .
10. INSTALL THE ADJUSTABLE FEET / LEVELERS.



TURN THE ASSEMBLY OVER WITH THE WHEELS AND LEGS ON THE FLOOR. RECHECK TO MAKE SURE ALL NUTS ARE TIGHT.

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of three (3) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY

10700 Medallion Drive

Cincinnati, Ohio 45241-4807 USA

www.gmpopcorn.com

Phone: 1-800-543-0862

Fax: 1-800-542-1496