

Serving Station

Instruction Manual

Model 5030



FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

	 DANGER Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.
	 WARNING ALWAYS wear safety glasses when servicing this equipment.
	 WARNING Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.
	 CAUTION Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operation.
	 CAUTION This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

CARE AND CLEANING

Cleaning your machine daily. A clean well-kept machine is one of the best ways of advertising your products.

Use a mild soap and damp cloth to clean the exterior of the unit.

 
All utensils and insert bowls should be cleaned with a sanitizing solution to help prevent contamination from microorganisms.

Recommended cleaning procedure for main pump body.

- 1. Raise the pump assembly and lid out of the water tank. Operate pump to remove remainder of cheese.**
- 2. Place lower end of pump assembly in a bucket containing a mixture of hot water and liquid dish detergent. Operate pump until cheese product is expelled and water flows from discharge tube (approximately 10 pumps) “ DO NOT RECIRCULATE DIRTY WATER TO BUCKET!”**
- 3. Disassemble lid from pump assembly by loosening locking collar. You will now have the plunger, pump body and lid separate. Wash lid and all exterior surfaces of pump. Remove retaining pin from bottom of pump body to remove checkball. Use supplied tube brushes to clean pump body and discharge tube. NOTE: So as not to lose small parts, wash them in bucket filled with detergent water, not in a sink.**
- 4. Push the spring stop disc toward the knob and hold plunger rod; loosen knob counter-clockwise. Disassemble plunger assembly in order to wash all components.**
- 5. Rinse all parts with clean hot water.**
- 6. Using a bucket, sanitize all parts with 100**


PUMP PLUNGER ASSEMBLY

HOW TO USE SMALL
TUBE BRUSH

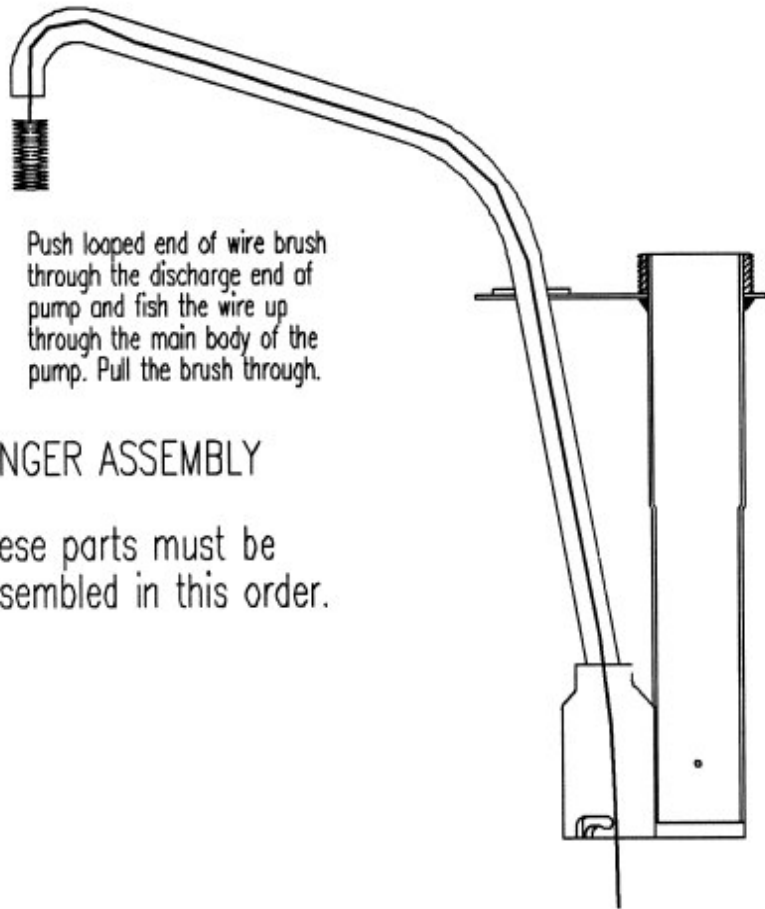

PUMP PLUNGER ASSEMBLY

 These parts must be assembled in this order.

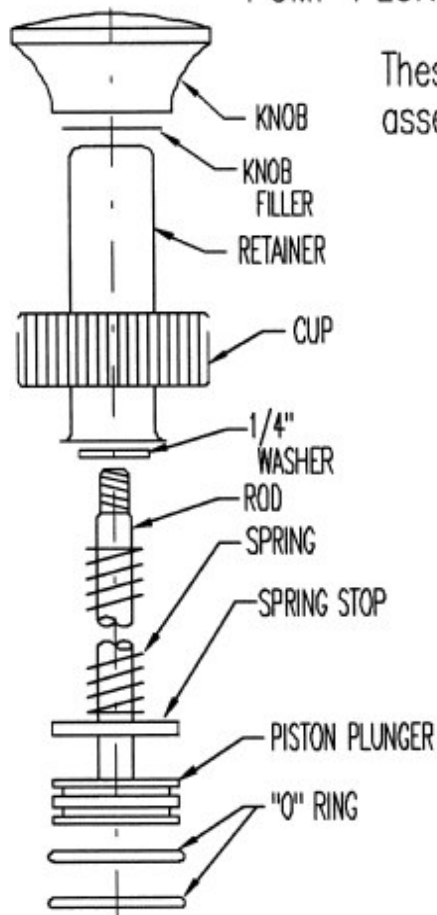


The first time the pump is used after cleaning the pump will need primed. Push down on the pump to bottom of stroke and hold. Hold a napkin over end of spout with your finger and release the pump. The pump is now ready to use.

Do not leave out any parts of the pump, they are all important. The pump may not operate correctly with missing parts.

PARTS LIST- PUMP ASSEMBLY

Item No.#	Part NO.#	Description
2-1	38237	Pump Weld Assembly
2-2	38238	Plunger Retainer
2-3	38600	Piston Assembly
2-4	38241	Retaining Pin
2-5	82765	"O" Ring
2-6	38250	Check Ball
2-7	38262	Plunger Spring
2-8	38250	Check Ball
2-9	38262	Knob
2-10	38263	Spring Stop
2-11	38603	Plug Assembly
2-12	38265	Retainer Cup
2-13	38280	Knob Filler Washer
2-14	38287	Washer, SAE 1/4"
2-15	82766	"O" Ring

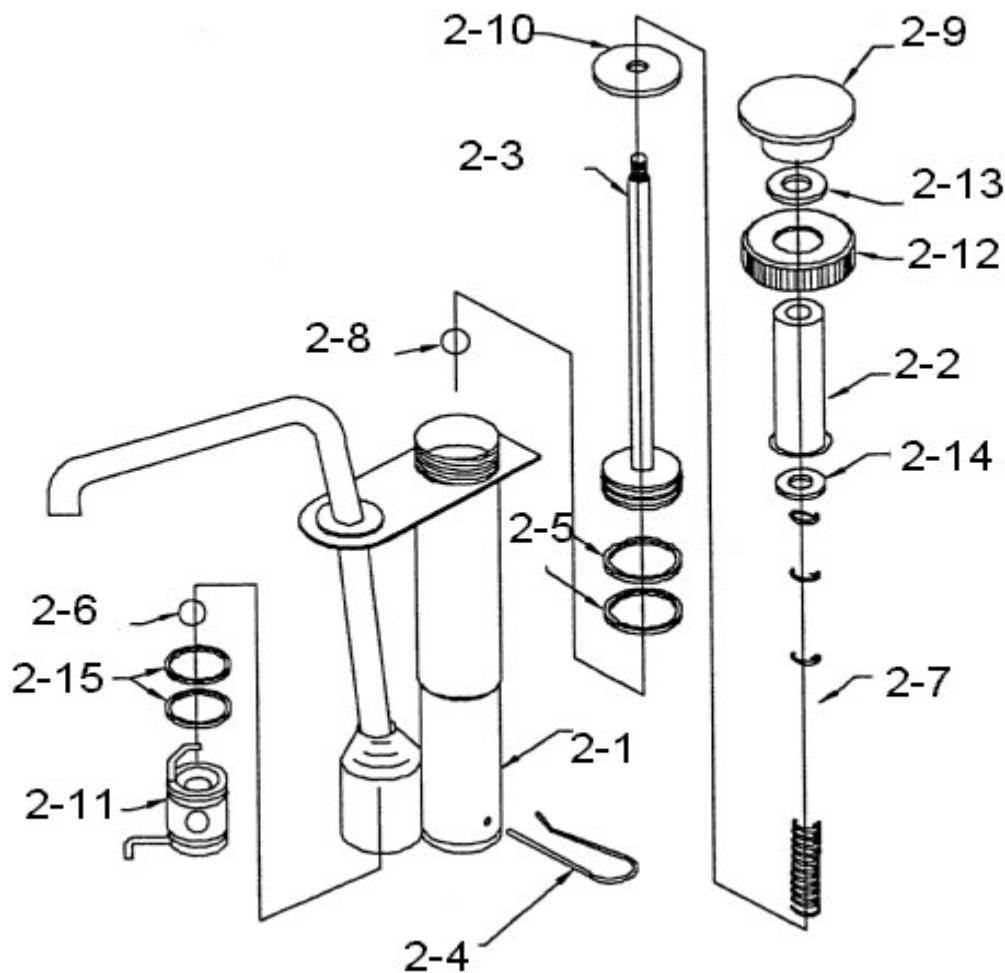 

ORDERING SPARE PARTS

1. Identify the worn or broken part by checking it with the illustrations and parts list.
2. When ordering parts, include part number, part name, and quantity required.
3. Include you model name and machine serial number (found on nameplate) with your order.
4. Address orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

or, place orders at:

(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com
www.gmpopcorn.com

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, Ohio 45241-4807 USA