INSTALLATION INSTRUCTIONS 4-HOLE SHOWER/BATH FAUCETS















These instructions are for installing awn. 4-hole shower/bath faucets. Please read all instructions carefully before starting the installation.

TABLE OF CONTENTS

Preparation	2
Materials & Tools	2
Parts	3
Installation	4
Care and Cleaning	7
Warranty	8
Return Policy	8
Asking for Assistance	8

PREPARATION

• Before You Begin

Before installing any Dawn product in your new or remodeled kitchen, you should make sure that you are in compliance with all local plumbing codes.

Check The Accessory Items

Before installation, please check the condition of the product and, if appropriate, its components. If there is any problem with the product and/or its components, please contact the store you purchased it from for a replacement. As soon as you have inspected your product, please return it to its original packaging until you are ready to install it.

Handle With Care


To protect its finish and avoid damage before and after installation, please handle the product with care. For care and cleaning tips after installation, please refer to the *Care and Cleaning Guide* in this instruction guide.

MATERIALS & TOOLS

Screwdriver
Adjustable Wrenches
Pencil
Masking Tape
Thread Sealant
Plumber Putty
Other Tools as Needed




PARTS

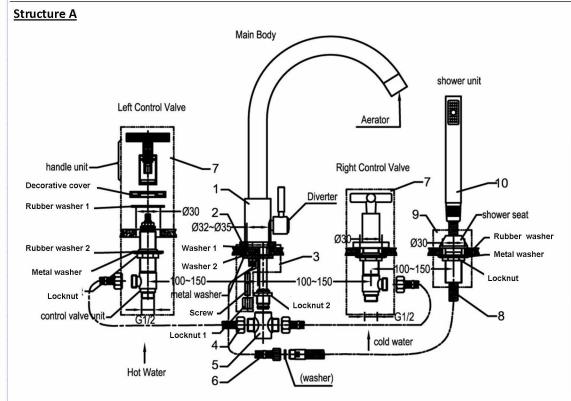

-	
ltem	Qty
1: Main Body	1
2: Decorative Cover	1
3: Fixing Accessories	1
4: Water Supply Hose	2
5: Tee	1
6: Shower Hose	1
7: Control Valve Unit	2
8: Flexible Hose	1
9: Shower Seat	1
10: Shower Handle	1

Structure B

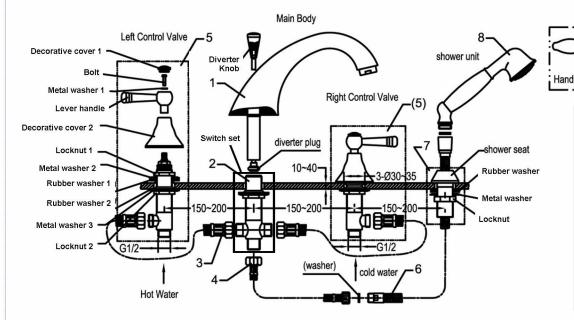

ltem	Qty
1: Main Body	1
2: Diverter Body	1
3: Water Supply Hose	2
4: Shower Hose	1
5: Control Valve Unit	2
6: Flexible Hose	1
7: Shower Seat	1
8: Shower Head	1

- *Measurement Unit: mm (1 inch = 25.4 mm)
- *Drawings are for reference only. Please refer to actual product for exact size, shape and parts.
- *Dawn reserves the right to make revisions in the design of faucets without notice.

INSTALLATION


IMPORTANT: Recommended for professional installers only. The installer maintains responsibility for installing the product safely.


Note:

- The faucet main body is already assembled; please do not disassemble it.
- Thoroughly clean the inside of all pipes with a soft cloth before installation.
- Check for leakage after installation.
- The water pressure should be 140-860 kPa (20-140 lbs.) and the temperature should be 41-160°F (5-71°C).
- When facing the faucet, the hot water supply should be connected to the left shank and the cold water supply should be connected to the right shank.

INSTALLATION INSTRUCTIONS FOR STRUCTURE A

- 1. Check the thickness of faucet deck and the size of faucet holes before installation to make sure proper faucet assembly.
- 2. Turn off hot and cold water supplies.
- 3. Install the faucet main body:
 - a) Connect the screw and shower hose to the faucet main body. Slide the decorative cover and washer 1 down the faucet main body.
 - b) Put the shower hose through the faucet hole and let the faucet main body stand on the faucet deck. From under the faucet hole, slide washer 2 and the metal washer onto the screw and slightly screw in locknut 1.
 - c) Adjust the faucet main body to your desired position and then tighten locknut 1. Tighten locknut 2 and the tee to the pipe attached to the faucet main body.
- 4. Install the control valves (Fig. 1~4 on the next page):
 - a) Remove the handle unit (Fig. 1 and Fig. 2), decorative cover and rubber washer 1 from each control valve unit. Do not remove rubber washer 2 and the metal washer.
 - b) From under the installation hole, put the valve body through. From the top of the installation hole, reinstall rubber washer 1 and the decoration cover to the valve.
 - c) Adjust the outlet of the left valve to the left and the outlet of the right valve to the right. Tighten the nuts. Connect one end of the water supply hose to the outlet and the other end to the tee on the faucet main body with the locknuts on the hose. The left valve should connect to hot water and the right valve to cold water.
 - d) Assemble the handle unit back to the valve and push down the handle (Fig. 3 and Fig. 4). Tighten the handle by turning the valve cover in clockwise direction.
- 5. Put the shower seat through the installation hole. From under the installation hole, install the rubber washer and the metal washer to the shower seat and then tighten the locknut. Connect the shower hose attached to the faucet main body to the shower handle with the flexible hose.
- 6. Check for leakage: turn off the water and remove the aerator assembly. Turn on the main water supply and check for leaks. Turn on the hot and cold valves and run water through the spout to remove debris. Also check for leaks. If no leakage is observed, turn off the hot and cold valves and reinstall the aerator assembly.

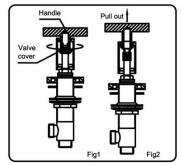

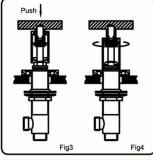



INSTALLATION


IMPORTANT: Recommended for professional installers only. The installer maintains responsibility for installing the product safely.


Note:

- The faucet main body is already assembled; please do not disassemble it.
- Thoroughly clean the inside of all pipes with a soft cloth before installation.
- Check for leakage after installation.
- The water pressure should be 140-860 kPa (20-140 lbs.) and the temperature should be 41-160°F (5-71°C).
- When facing the faucet, the hot water supply should be connected to the left shank and the cold water supply should be connected to the right shank.

INSTALLATIOIN INSTRUCTIONS FOR STRUCTURE B

- 1. Check the thickness of faucet deck and the size of faucet holes before installation to make sure proper faucet assembly.
- 2. Turn off hot and cold water supplies.
- 3. Install faucet main body:
 - a) Disassemble the switch set from the faucet main body. From under the installation hole, put the switch set through the installation hole. Put the rubber washer in the sealing groove at the downside of the main body, place the metal washer onto the main body and fasten the switch set.
 - b) Adjust the spout to your desired position and tighten the locknut on the switch set to the faucet main body.
- 4. Install the control valves (Fig. 5~8 on the next page):
 - a) Disassemble the valve body: remove the top section of each valve, leaving only locknut 2, metal washer 3 and rubber washer 2 on each valve body (Fig. 5 and Fig. 6).
 - b) From under the installation hole, put the valve body through. From the top of the hole, slide rubber washer 2 down the valve body and install locknut 1 and decorative cover 2. Adjust locknut 1 and 2 to make sure decorative cover 2 is properly attached to the faucet deck.
 - c) Adjust the outlet of the left valve to the left and the outlet of the right valve to the right. Tighten the nuts. Connect one end of the water supply hose to the outlet and the other end to the tee on the faucet main body with the locknuts on the hose. The left valve should connect to hot water and the right valve to cold water.
 - d) Assemble the handle to the valve body, put in metal washer 1, tighten the bolt, and then assemble decorative cover 1 (Fig. 7 and Fig. 8).
- 5. Put the shower seat through the installation hole. From under the installation hole, install the rubber washer and the metal washer to the shower seat and then tighten the locknut. Connect the shower hose attached to the faucet main body to the shower handle with the flexible hose.
- 6. Remove the aerator assembly. Turn on the main water supply and check for leaks. Turn on the hot and cold valves and run water through the spout to remove debris. Also check for leaks. If no leakage is observed, turn off the hot and cold valves and reinstall the aerator assembly.

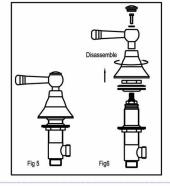

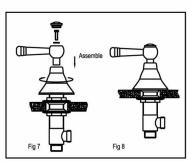



INSTALLATION

IMPORTANT: Recommended for professional installers only. The installer maintains responsibility for installing the product safely.

USER INSTRUCTIONS:

- Control hot water with the left handle and cold water with the right one.
- Turn the left handle clockwise to turn the hot water on; turn the handle counter-clockwise to turn the hot water off.
- Turn the right handle counter-clockwise to turn the cold water on; turn the handle clockwise to turn the cold water off.

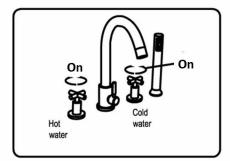


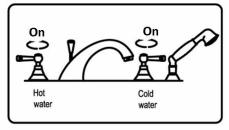

- Usage of the diverter
 - Structure A: turn the diverter handle to your left to allow water flow from the shower handle; turn the diverter handle to your right to allow water flow from the faucet.



— Structure B: turn on the water and pull up the diverter knob to divert the water to the showerhead. When the water is turned off, the diverter will automatically reset.

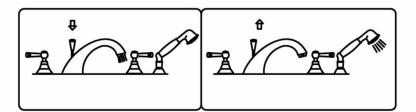



CARE AND CLEANING

To maintain the product and to avoid possible damage, please use caution when cleaning and always follow the manufacturer's instructions.

- Clean as and when required. Regular cleaning prevents scale buildup and water spotting.
- To clean, flush with clean water and dry with a soft cloth.
- To remove scale or water spots, only use cleaners made specifically for that purpose. Apply cleaners to cleaning cloths, pads, or sponges first; do not apply directly onto the product.
- Do not allow any cleaning product to remain on your faucet for longer than necessary.
- Do not use any abrasive cleaning products, such as scrubbing detergent, polisher, sand-cloth, paper tissue, or scrapper.
- Do not use detergents or soaps that contain acid or that are undissolvable.
- Take the aerator off and clean it when necessary.
- After cleaning, rinse thoroughly with clean water to remove any cleaner residue.





LEGAL DISCLAIMER:

- This instruction guide is done as a public service to customers of Dawn Kitchen & Bath Products, Inc. ("Dawn"). For special situations or further assistance, please consult professionals.
- All products should be inspected by customers upon receipt and before any preparation for installation.
 Any defective product should be reported immediately and should NOT be installed.
- Requirements may vary for installation in a granite, marble, stone, or butcher block countertop.
- Installation by professional installers is highly recommended. Dawn assumes no liability for any damages incurred through the use of information provided in this publication or the installation.



WARRANTY

All Dawn products have been manufactured and tested to the highest quality standards by Dawn Kitchen & Bath Products, Inc. ("Dawn"). This warranty is limited to Dawn products purchased and installed in the United States. Dawn Kitchen & Bath Products, Inc. warrants its products to be free from manufacturing defects in material and workmanship during normal residential use for as long as the original consumer purchaser owns his or her home. This warranty only extends to the original consumer purchaser and this warranty is non-transferable. If any defect is found in normal residential use, Dawn Kitchen & Bath Products, Inc. will, at its election, repair, provide a replacement part of product, or make appropriate adjustment at no charge (excluding labor charges and other incidental or consequential costs). Damage to a product caused by accident, misuse, or abuse is NOT covered by this warranty. Improper care and cleaning will void the warranty. If Dawn is unable to provide a replacement and repair cannot be made, Dawn may elect to refund the purchase price to the original consumer purchaser in exchange for the return of the product. (IMPORTANT: The original consumer purchaser should be responsible for inspecting products upon receipt. Any defective product should be reported immediately and should NOT be installed.)

THIS WARRANTY DOES NOT COVER, AND DAWN DISCALIMS ANY LIABILITY FOR:

- Conditions or damage NOT resulting from defects in material or workmanship.
- Conditions or damage resulting from
 - ① normal wear and tear, improper installation, improper maintenance, misuse, abuse, negligence, accident or alteration, or
 - 2 the use of abrasive cleaning products or the use of the product in any manner contrary to the product instructions, or
 - ③ conditions in the home such as excessive water pressure or corrosion.
- Labor, shipping, or other costs for the disconnection, deinstallation, or return of the product for warranty service, or costs for installation or reinstallation of the product.
- Parts, accessories, connected materials, or related products not manufactured by Dawn.

Dawn reserves the right to inspect any Dawn product reported to be defective prior to any repair or replacement. Repair and replacement costs EXCLUDE shipping, labor, and consequential expenses. To request warranty service, please contact Dawn Customer Service at toll-free 1-877-Dawn-USA. *NOTE*: Proof of purchase (original sales receipt) and description of problem must be provided with all warranty claims.

RETURN POLICY

You may only return new, uninstalled, or unused items sold and fulfilled by Dawn Kitchen & Bath Products, Inc. for a full refund within 30 days of delivery. Items must be returned in its original package. Returns of used items or returns after 30 days of delivery may be accepted with a 15% restocking fee. Dawn will pay for return shipping costs only if the return is a result of our fault. If you receive a faulty product and need to exchange it for the same product, please contact our customer service via phone, fax, or e-mail to request a replacement. If you would like to exchange a product for a different one, please first return the original product to our location at 27688 Industrial Blvd., Hayward, CA 94545 and then place a new order.

PARTIAL REFUNDS MAY BE GIVEN TO:

- Most of the items that are returned after 30 days of delivery
- Any item not returned in the condition it was delivered
- Any item that has obvious signs of use
- A 15% restocking fee will apply to all used items or items returned after 30 days of delivery.

ASKING FOR ASSISTANCE

Customer Service Department Dawn Kitchen & Bath Products, Inc. 27688 Industrial Blvd., Hayward, CA 94545 Toll-Free: 877-DAWN-USA (877-329-6872)

Tel: 510-723-0088 Fax: 510-723-0099
E-mail: dp@dawnusa.net Web: www.dawnusa.net