


# BUNN®

# *FMD-1*

*(prior to S/N FMD0013000)*

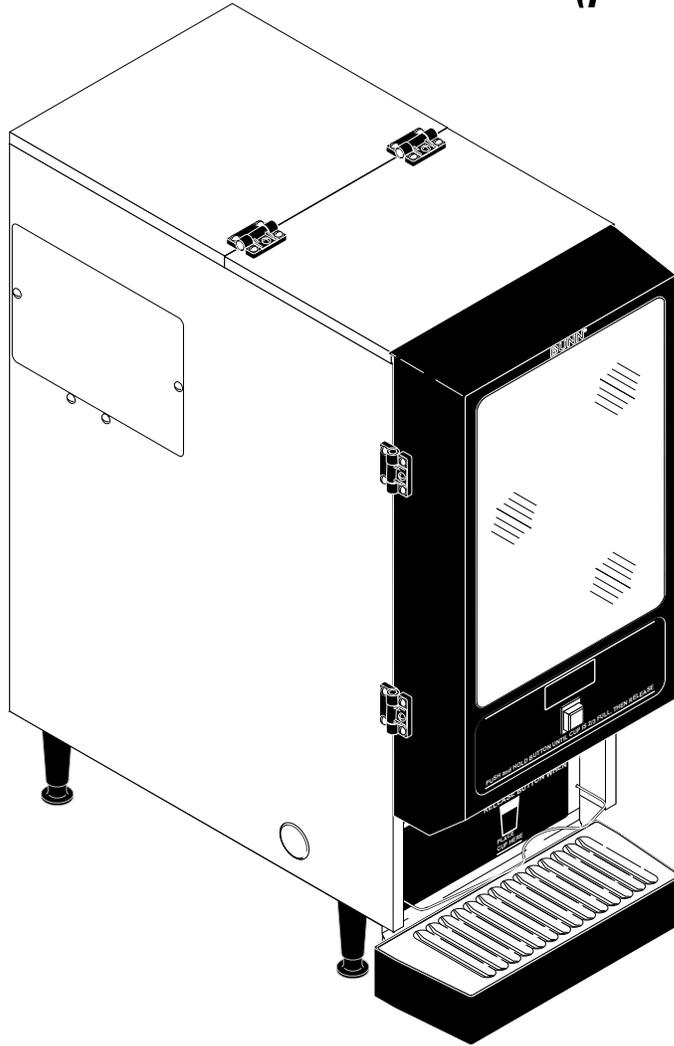

## **OPERATING & SERVICE MANUAL**

**BUNN-O-MATIC CORPORATION**

**POST OFFICE BOX 3227**

**SPRINGFIELD, ILLINOIS 62708-3227**

**PHONE: (217) 529-6601 FAX: (217) 529-6644**

## INTRODUCTION

This equipment dispenses hot beverages on demand from powered product. It is for indoor use only on a sturdy counter or shelf.

## WARRANTY

Bunn-O-Matic Corp. ("Bunn") warrants the equipment manufactured by it to be commercially free from defects in material and workmanship existing at the time of manufacture and appearing within one year from the date of installation. In addition:

1.) Bunn warrants electronic circuit and/or control boards to be commercially free from defects in material and workmanship for two years from the date of installation.

2.) Bunn warrants the compressor on refrigeration equipment to be commercially free from defects in material and workmanship for two years from the date of installation.

3.) Bunn warrants that the grinding burrs on coffee grinding equipment will grind coffee to meet original factory screen sieve analysis for three years from date of installation or for 30,000 pounds of coffee, whichever comes first.

This warranty does not apply to any equipment, component or part that was not manufactured by Bunn or that, in Bunn's judgement, has been affected by misuse, neglect, alteration, improper installation or operation, improper maintenance or repair, damage or casualty.

**THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER WARRANTY, WRITTEN OR ORAL, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF EITHER MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.** The agents, dealers or employees of Bunn are not authorized to make modifications to this warranty or to make additional warranties that are binding on Bunn. Accordingly, statements by such individuals, whether oral or written, do not constitute warranties and should not be relied upon.

The Buyer shall give Bunn prompt notice of any claim to be made under this warranty by telephone at (217) 529-6601 or by writing to Post Office Box 3227, Springfield, Illinois, 62708-3227. If requested by Bunn, the Buyer shall ship the defective equipment prepaid to an authorized Bunn service location. If Bunn determines, in its sole discretion, that the equipment does not conform to the warranty, Bunn shall repair the equipment with no charge for parts during the warranty period and no charge for labor by a Bunn Authorized Service Representative during the warranty period. If Bunn determines that repair is not feasible, Bunn shall, at its sole option, replace the equipment or refund the purchase price for the equipment.

**THE BUYER'S REMEDY AGAINST BUNN FOR THE BREACH OF ANY OBLIGATION ARISING OUT OF THE SALE OF THIS EQUIPMENT, WHETHER DERIVED FROM WARRANTY OR OTHERWISE, SHALL BE LIMITED, AS SPECIFIED HEREIN, TO REPAIR OR, AT BUNN'S SOLE OPTION, REPLACEMENT OR REFUND.**

In no event shall Bunn be liable for any other damage or loss, including, but not limited to, lost profits, lost sales, loss of use of equipment, claims of Buyer's customers, cost of capital, cost of down time, cost of substitute equipment, facilities or services, or any other special, incidental or consequential damages.

## USER NOTICES

Carefully read and follow all notices on the equipment and in this manual. They were written for your protection. All notices are to be kept in good condition. Replace any unreadable or damaged labels.



28328.0002

## USER NOTICES (Cont.)


<b>▲WARNING</b>
<ul style="list-style-type: none"><li>◆ Fill water tank before turning -on thermostat or connecting appliance to power source.</li><li>◆ Use only on a properly protected circuit capable of the rated load.</li><li>◆ Electrically ground the chassis.</li><li>◆ Follow national/local electrical codes.</li><li>◆ Do not use near combustibles.</li></ul>
FAILURE TO COMPLY RISKS EQUIPMENT DAMAGE, FIRE, OR SHOCK HAZARD
READ THE ENTIRE OPERATING MANUAL BEFORE BUYING OR USING THIS PRODUCT
THIS APPLIANCE IS HEATED WHENEVER CONNECTED TO A POWER SOURCE
<small>00831.0000F 3/98 © 1988 BUNN-O-MATIC CORPORATION</small>

00831.0000

This equipment is to be installed to comply with the Basic Plumbing Code of the Building Officials and Code Administrators International, Inc. (BOCA) and the Food Service Sanitation Manual of the Food and Drug Administration (FDA).

00656.0000

### CONTROL THERMOSTAT ADJUSTMENT

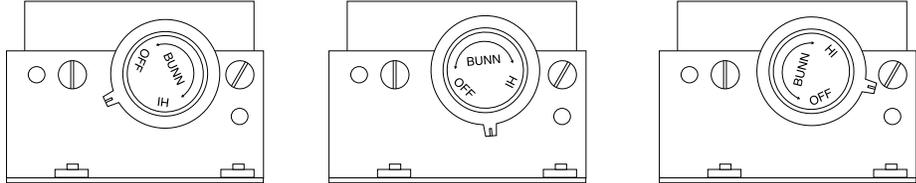


200° F                      190° F                      180° F

APPROXIMATE THERMOSTAT TEMPERATURE SETTINGS

28368.0000A 10/97 © 1997 BUNN-O-MATIC CORPORATION

28368.0000

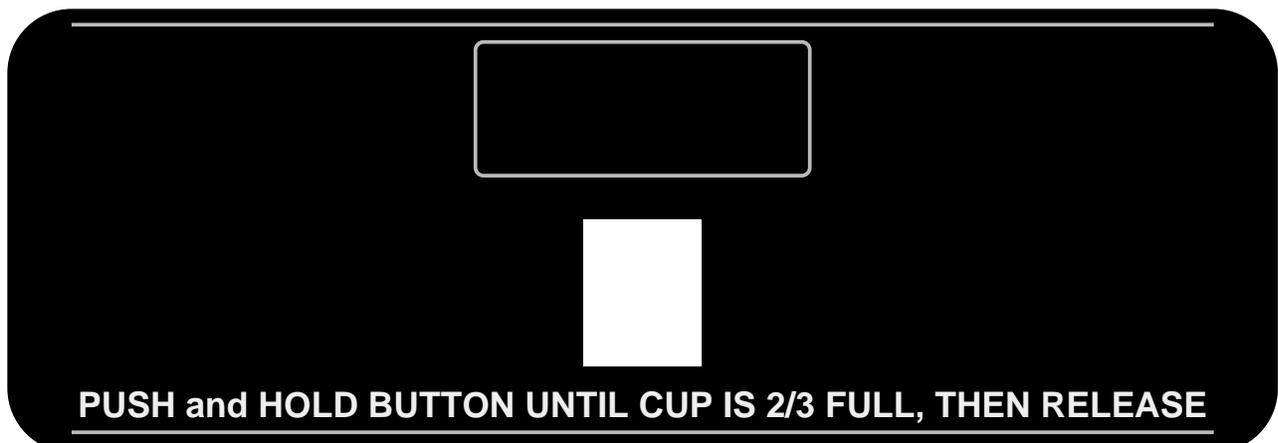

**PUSH and HOLD BUTTON UNTIL CUP IS 2/3 FULL, THEN RELEASE**

28301.0001

## INITIAL SET-UP

1. Locate the drip tray assembly beneath the dispenser nested in the packing material.
2. Remove the drip tray and the drip tray cover and set them aside.
3. Remove the water strainer assembly from the drip tray and set it aside.
4. Remove the four legs from the drip tray, apply non-skid pads to the bottom of the legs and securely install the legs in the dispenser base.

## ELECTRICAL REQUIREMENTS

**CAUTION** - The dispenser must be disconnected from the power source until specified in *Initial Set-Up*.

The 120 volt version of this dispenser has an attached cordset and requires 2-wire, grounded service rated 120 volts ac, 15 amp, single phase, 60 Hz. The mating connector must be a NEMA 5-15R.

The 120/208 and the 120/240 versions of this dispenser has an attached cordset. The mating connector must be a NEMA 14-20R.

*(Refer to the dispenser's dataplate for exact voltage requirement.)*

## ELECTRICAL HOOK-UP

**CAUTION** – Improper electrical installation will damage electronic components.

1. An electrician must provide electrical service as specified.
2. Using a voltmeter, check the voltage and color coding of each conductor at the electrical source.
3. Open the front door of the dispenser and place the heater switch in the “OFF” (upper position).
4. Connect the dispenser to the power source.
5. If plumbing is to be hooked-up later be sure the dispenser is disconnected from the power source. If plumbing has been hooked-up, the dispenser is ready for *Initial Fill & Heat*.

## PLUMBING REQUIREMENTS

This dispenser must be connected to a **COLD WATER** system with operating pressure between 20 and 90 psi (138 and 620 kPa) from a ½" or larger supply line. A shut-off valve should be installed in the line before the dispenser. Install a regulator in the line when pressure is greater than 90 psi (620 kPa) to reduce it to 50 psi (345 kPa). The water inlet fitting is ¼" flare.

**NOTE** - Bunn-O-Matic recommends ¼" copper tubing for installations of less than 25 feet and ⅜" for more than 25 feet from the ½" water supply line. At least 18 inches of an FDA approved flexible beverage tubing, such as reinforced braided polyethylene or silicone, before the brewer will facilitate movement to clean the countertop. It can be purchased direct from Bunn-O-Matic (part number 00326-0000). Bunn-O-Matic does not recommend the use of a saddle valve to install the brewer. The size and shape of the hole made in the supply line by this type of device may restrict water flow

**This equipment must be installed to comply with the Basic Plumbing Code of the Building Officials and Code Administrators International, Inc. (BOCA) and the Food Service Sanitation Manual of the Food and Drug Administration (FDA).**

## **PLUMBING HOOK-UP**

1. Securely attach the short piece of tubing on the water strainer assembly to the inlet fitting on the bottom of the dispenser.
2. Flush the water line and securely attach it to the flare fitting on the water strainer assembly.
3. Turn-on the water supply.

## **INITIAL FILL & HEAT**

**CAUTION** - The dispenser must be disconnected from the power source throughout the initial set-up, except when specified in the instructions.

1. Turn-on the water supply and connect the dispenser to the power source.
2. Water will automatically flow into the tank to the proper level and then shut-off. This will take less than five minutes.
3. When the tank is full of water, open the front door and place the heater switch in the "ON" (lower) position. A tank full of cold water will take approximately forty minutes for the water to heat on 120 volt versions.

During this waiting period, complete these dispenser set-up steps:

- a. Place the drip tray in front of the dispenser. Set the drip tray cover in place.
- b. Place a set of keyholes in the cup locator plate over the screws beneath the hopper access door and push down gently.
- c. Fill the hopper with the dry product to be dispensed.

## **DISPENSER USE**

1. Simply place a cup on the drip tray beneath the dispensing tip.
2. Press the button to froth and dispense the beverage.
3. Release the button when the cup is approximately  $\frac{2}{3}$  full and allow the mixing chamber to drain.

**NOTE** - The mixing chamber must drain at the end of each dispense.

## **CLEANING**

Refer to the decal inside the hopper access door for cleaning recommendations and procedures.

The use of a damp cloth rinsed in any mild, non-abrasive, liquid detergent is recommended for cleaning all surfaces on Bunn-O-Matic equipment.

## **ADJUSTMENTS**

The beverage solenoid is preset to dispense approximately one ounce per second. This amount can be adjusted:

1. Disconnect the dispenser from the power source.
2. Remove the left side access panel.
3. Rotate the control at the base of the solenoid clockwise to decrease or counterclockwise to increase the amount of water.

## **DRAINING THE HOT WATER TANK**

**CAUTION** - The dispenser must be disconnected from the power source throughout these steps.

1. Disconnect the dispenser from the power source.
2. Open front door and place tank heater switch in the "OFF" (upper) position.
3. Shut-off and disconnect the incoming water supply.
4. Remove the top panel.
5. Gently remove one of the grommets from the tank lid.
6. Insert a tube to the bottom of the tank and syphon ALL of the water out.  
(Bunn-O-Matic has a syphon assembly #12440.0000 available for this purpose.)

**NOTE** - The dispenser must be refilled using the INITIAL FILL & HEAT steps before reconnecting to the power source.

## **HOPPER DISPENSE RATE OF PRODUCT**

1. Hopper dispense rate with 8 tooth gear and auger wire is approximately 4 to 6 grams per second.
2. Hopper dispense rate with optional 12 tooth gear and auger wire is 6 to 9 grams per second.

## TROUBLESHOOTING

A troubleshooting guide is provided to suggest probable causes and remedies for the most likely problems encountered. If the problem remains after exhausting the troubleshooting steps, contact the Bunn-O-Matic Technical Service Department.

- Inspection, testing, and repair of electrical equipment should be performed only by qualified service personnel.
- All electronic components have 120 volt ac and low voltage dc potential on their terminals. Shorting of terminals or the application of external voltages may result in board failure.
- Intermittent operation of electronic circuit boards is unlikely. Board failure will normally be permanent. If an intermittent condition is encountered, the cause will likely be a switch contact or a loose connection at a terminal or crimp.
- Solenoid removal requires interrupting the water supply to the valve. Damage may result if solenoids are energized for more than ten minutes without a supply of water.
- The use of two wrenches is recommended whenever plumbing fittings are tightened or loosened. This will help to avoid twists and kinks in the tubing.
- Make certain that all plumbing connections are sealed and electrical connections tight and isolated.
- This unit is heated at all times. Keep away from combustibles.

- WARNING** –
- Exercise extreme caution when servicing electrical equipment.
  - Unplug the dispenser when servicing, except when electrical tests are specified.
  - Follow recommended service procedures
  - Replace all protective shields or safety notices

PROBLEM	PROBABLE CAUSE	REMEDY
Product will not dispense	1. No water	Water lines and valves to the dispenser must be open.
	2. No power or incorrect voltage to the dispenser	(A1) Check the outlet for 120 volts on two wire 120 volt dispenser. (A2) Check the outlet for 120 volts on three wire 120/240 volt dispenser.  (B) Check circuit breakers or fuses.
	3. Dispense switch	Refer to <i>Service</i> - Dispense Switch for testing procedure. See page 16
	4. Dispense solenoid valve	Refer to <i>Service</i> - Dispense solenoid valve for testing procedures. See page 26

## TROUBLESHOOTING (cont.)

PROBLEM	PROBABLE CAUSE	REMEDY	
Product will not dispense (cont.)	5. Solenoid valve (inlet)	Refer to <i>Service</i> - Solenoid Valve (Inlet) for testing procedures. See page 27	
	6. Level control board and probe	Refer to <i>Service</i> - Level Control Board and Probe for testing procedures. See page 22	
	7. Overflow protection switch	Refer to <i>Service</i> - Overflow protection switch for testing procedures. See page 24	
	8. Auger drive	Refer to <i>Service</i> - Auger Drive. See page 12	
	9. Water strainer	(A) Direction of flow arrow must be pointing towards brewer.	
		(B) Remove the strainer and check for obstructions. Clear or replace.	
	10. Lime build-up	Inspect the tank assembly for excessive lime deposits. Delime as required.	
	Water is not hot	1. Limit thermostat <b>CAUTION</b> - Do not eliminate or bypass limit thermostat. Use only BOM replacement part #29329.1000	Refer to <i>Service</i> - Limit Thermostat for testing procedures. See page 24
		2. Control thermostat	Refer to <i>Service</i> - Control Thermostat for testing procedures. See page 15
		3. Tank Heater	Refer to <i>Service</i> - Tank Heater for testing procedures. See page 28

## TROUBLESHOOTING (cont.)

### PROBLEM

### PROBABLE CAUSE

### REMEDY

Water is not hot (Cont.)

4. Tank heater switch

Refer to *Service* - Tank Heater Switch for testing procedures. See page 29

Spitting or excessive steaming

1. Lime build-up

**CAUTION** - Tank and tank components should be delimed regularly depending on local water conditions. Excessive mineral build-up on stainless steel surfaces can initiate corrosive reactions resulting in serious leaks.

Inspect tank assembly for excessive lime deposits. Delime as required.

2. Control thermostat

Refer to *Service* - Control Thermostat for testing procedures. See page 15

Dripping from dispense tip

1. Lime build-up

**CAUTION** - Tank and tank components should be delimed regularly depending on local water conditions. Excessive mineral build-up on stainless steel surfaces can initiate corrosive reactions resulting in serious leaks.

Inspect the tank assembly for excessive lime deposits. Delime as required.

2. Dispense solenoid valve

Remove the dispense solenoid valve and clear any obstructions. Rebuild or replace the valve if necessary. See page 26

Water flows into tank continuously

1. Level control board and probe

Refer to *Service* - Level Control Board and Probe for testing procedures. See page 22

2. Solenoid valve (Inlet)

Refer to *Service* - Solenoid Valve (Inlet) for testing procedures. See page 27

3. Overflow Protection Switch

Refer to *Service* - Overflow Protection Switch for testing procedures. See page 24

## TROUBLESHOOTING (cont.)

PROBLEM	PROBABLE CAUSE	REMEDY
Product overflows container	1. Dispense switch	Refer to <i>Service</i> - Dispense Switch for testing procedures. See page 16
	2. Dispense solenoid valve	Remove the solenoid valve and clear any obstructions. Rebuild or replace the valve if necessary. See page 26
Weak product	1. Water temperature	Place an empty container beneath the dispense tip. Initiate a dispense cycle and check the water temperature immediately below the dispense tip with a thermometer. (A) Reading for mechanical thermostat models should be 180°F to 200°F (see thermostat temperature settings decal in <i>USER NOTICES</i> on page 3.)
	2. Whipper motor	Refer to <i>Service</i> - Whipper Motor for testing procedure. See page 18
	3. Frother	Refer to <i>Service</i> - Frother Components. See page 18
	4. Dispense solenoid valve	Refer to <i>Service</i> - Dispense Solenoid Valve for test procedures. See page 26
	5. Auger drive	Refer to <i>Service</i> - Auger Drive Components. See page 12
	6. Auger spring	Refer to <i>Service</i> - Auger Drive Components. See page 12
	7. Auger motor	Refer to <i>Service</i> - Auger Drive Components. See page 12
	8. Rinse/Run switch	Refer to <i>Service</i> - Rinse/Run Switch for test procedures. See page 25

## TROUBLESHOOTING (CONT.)

PROBLEM	PROBABLE CAUSE	REMEDY
Dispenser is making unusual noises	1. Plumbing Lines	Plumbing lines should not be resting on the counter top.
	2. Water Supply	(A) The dispenser must be connected to a cold water line  (B) Water pressure to the dispenser must not exceed 90 psi (620 kPa). Install a regulator if necessary to lower the working pressure to approximately 50 psi (345 kPa).
	3. Tank Heater	Remove and clean lime off the tank heater. See page 28
Excess dust	1. Fan	Refer to <i>Service</i> - Fan for testing procedures. See page 17
	2. Hopper Delay Board	Refer to <i>Service</i> -Hopper Delay Board for testing procedures. See page 20
Display not lit	1. Lamp	Refer to <i>Service</i> - Lamp, see page 21 for lamp replacement.
	2. Lamp Holder	Refer to <i>Service</i> - Lamp Holder for testing procedures. See page 21
	3. Starter - Lamp	Refer to <i>Service</i> - Starter for testing procedures. See page 22
	4. Ballast	Refer to <i>Service</i> - Ballast for testing procedures. See page 14

## SERVICE

This section provides procedures for testing and replacing various major components used in this dispenser should service become necessary. Refer to *Troubleshooting* for assistance in determining the cause of any problem.

**WARNING** - Inspection, testing, and repair of electrical equipment should be performed only by qualified service personnel. The dispenser should be unplugged when servicing, except when electrical tests are required and the test procedure specifically states to plug-in the dispenser.

### COMPONENT ACCESS

**WARNING** - Disconnect the dispenser from the power source before the removal of any panel or the replacement of any component.

All components are accessible by opening the door, removal of the door panels, dispenser top covers, hopper, hopper support plate, splash guard, splash panel w/drip tray, lower front access panel, side and rear access covers.

Refer to the contents listing for component location.

### Contents

Auger Drive Components .....	12
Auger Motor .....	12
Ballast .....	14
Control Thermostat .....	15
Dispense Switch .....	16
Fan .....	17
Frother .....	18
Hopper Delay Board .....	20
Lamp Holder .....	21
Lamp .....	21
Lamp Starter and Socket .....	22
Level Control Board and Level Probe .....	22
Limit Thermostat .....	24
Overflow Protection Switch .....	24
Rinse/Run Switch .....	25
Solenoid (Dispense) .....	26
Solenoid (Inlet) .....	27
Tank Heater .....	28
Tank Heater Switch .....	29
Whipper Motor .....	18
Wiring Diagram .....	30

## AUGER DRIVE COMPONENTS

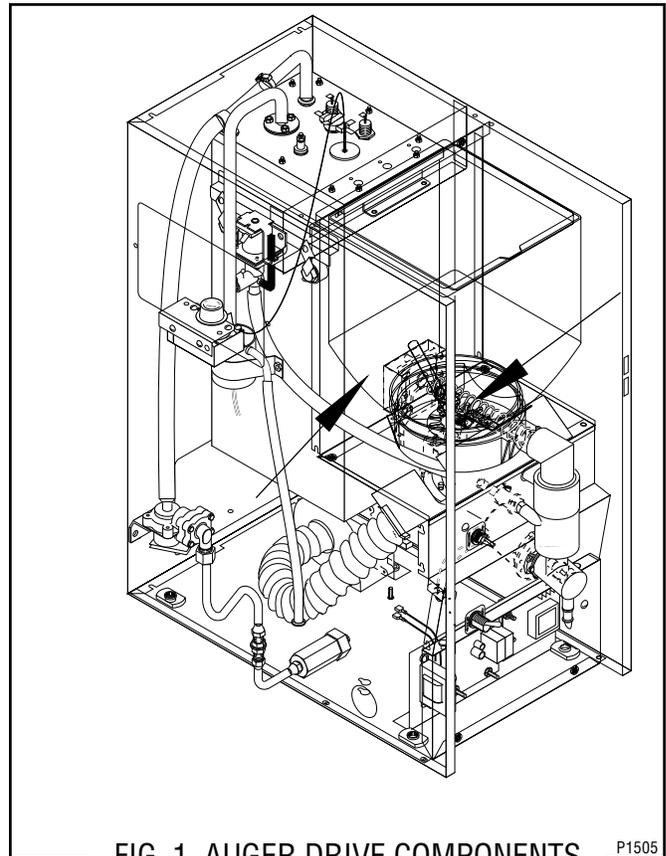


FIG. 1 AUGER DRIVE COMPONENTS P1505

### Location

The auger components are located inside the bottom part of the hopper except for the auger drive bracket, washer and locknut, which are located on the outside rear of the hopper base. The auger motor is located on the lower right rear of the motor mounting panel. Refer to Fig. 2 for disassembly and assembly.

### Test Procedures - Auger motors

1. Disconnect the dispenser from the power source.
2. Disconnect the wires from the motor.
3. Check the voltage across the red wire and the gray wire with a voltmeter. Press and hold the dispense switch. Connect the dispenser to the power supply. The indication must be :
  - a) 120 volts ac for two wire 120 volt models.
  - b) 120 volts ac for three wire 120/208 volt or 120/240 volt models.
4. Disconnect the dispenser from the power supply.

If voltage is present as described, proceed to #5. If voltage is not present as described, refer to the wiring diagram and check the dispenser wiring harness.

## SERVICE

### AUGER DRIVE COMPONENTS (CONT.)

- With the wires removed from the motor . Check for continuity across the two terminals on the bottom of the auger motor.

If continuity is present as described, refer to Fig.3 and reconnect the wires to the terminals on the bottom of the auger motor, the auger motor is operating properly.

If continuity is not present as described, replace the auger motor.

#### Removal, Cleaning and Replacement

##### Hopper & Auger

- Open the dispenser door and raise the top front cover.
- Lift the hopper assy (18) over the pins (17) on hopper support plate (13) and slide hopper assembly out the front of the dispenser.
- Remove hopper lid (1) and empty product.
- Lift hopper (2) off of the hopper base(9).
- Pull off the ejector elbow (16).
- Remove retainer clip (11) and washer (10) from the bottom of the hopper base (9).
- Remove whipper shaft (3), wiper blade (4) and wiper drive gear (5) from the hopper base (9).
- Remove auger wire (15) by pulling it out the front of the hopper base (9).
- Remove auger drive shaft (14) by removing the retaining clip (6) from auger drive shaft.
- Slide spacer (8) and auger drive shaft bracket (7) off of the auger drive shaft (14).
- Remove auger drive shaft (14) from hopper base (9).
- Wash components in a mild solution of dish detergent using a bristle brush when needed.
- Rinse and dry each item thoroughly.
- Check for damaged or broken components, replace any if necessary and reassemble hopper assembly.
- Install hopper assy (18) in the dispenser by sliding hopper assy on the hopper support plate (13) until the slot in the rear of the hopper base (9) seats against the shoulder screw (12) and pins (17) in the hopper support plate (13).

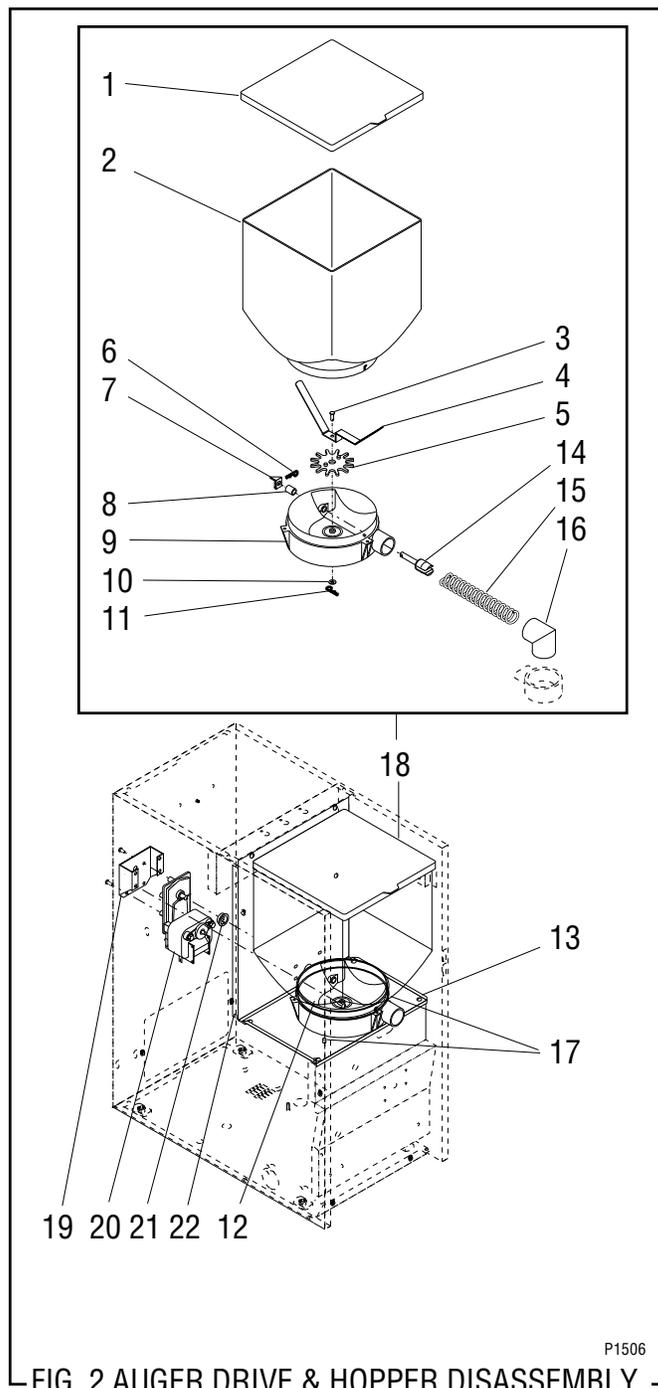


FIG. 2 AUGER DRIVE & HOPPER DISASSEMBLY


- |                        |                                |
|------------------------|--------------------------------|
| 1. Hopper Lid          | 13. Hopper Support Plate       |
| 2. Hopper              | 14. Auger Drive Shaft          |
| 3. Wiper Shaft         | 15. Auger Wire                 |
| 4. Wiper Blade         | 16. Ejector Elbow              |
| 5. Wiper Drive Gear    | 17. Hopper Locating Pins       |
| 6. Retainer Clip       | 18. Hopper Assembly            |
| 7. Auger Drive Bracket | 19. Auger Motor Bracket        |
| 8. Spacer              | 20. Auger Motor                |
| 9. Hopper Base         | 21. Dust Seal                  |
| 10. Washer             | 22. Auger Motor Mounting panel |
| 11. Retainer Clip      |                                |
| 12. Shoulder Screw     |                                |

## SERVICE (cont.)


### AUGER DRIVE COMPONENTS (cont.)

#### Auger Drive Motor (Refer to Fig. 2)

1. Remove hopper assy (18), and set aside for reassembly.
2. Remove the four #8-32 screws securing the hopper support plate (13), remove plate and set aside for reassembly.
3. Remove the four #8-32 screws, located inside the dispenser housing on the lower right front of the auger motor mounting panel (22), securing auger motor mounting bracket (19) and auger motor (20) to the rear of the auger motor mounting panel (22).
4. Disconnect the wires from the auger motor (20).
5. Remove auger motor mounting bracket (19), auger motor (20) and dust seal (21) as an assembly.
6. Remove dust seal (21) from auger motor (20).
7. Remove the four #8-32 screws securing the auger motor (20) to the auger motor mounting bracket (19).
8. Remove auger motor (20) and discard.
9. Using four #8-32 screws install new auger motor (20) on mounting bracket (19).
10. Install dust seal (21) on auger motor shaft and align notch in seal with motor casting.
11. Reconnect the wires to the terminals on the bottom of the auger motor.
12. Refer to Fig. 3 when reconnecting wires.
13. Using four #8-32 locking screws install auger motor, dust seal and mounting bracket to the rear of the auger motor mounting panel (22).
14. Install hopper assy (18).

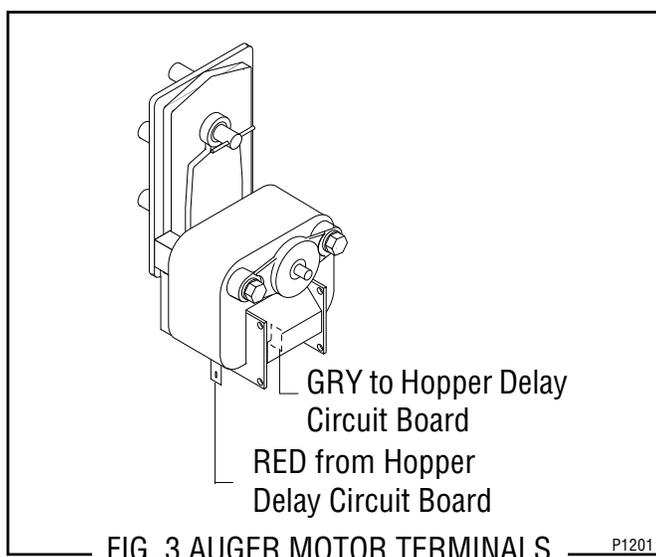

## BALLAST

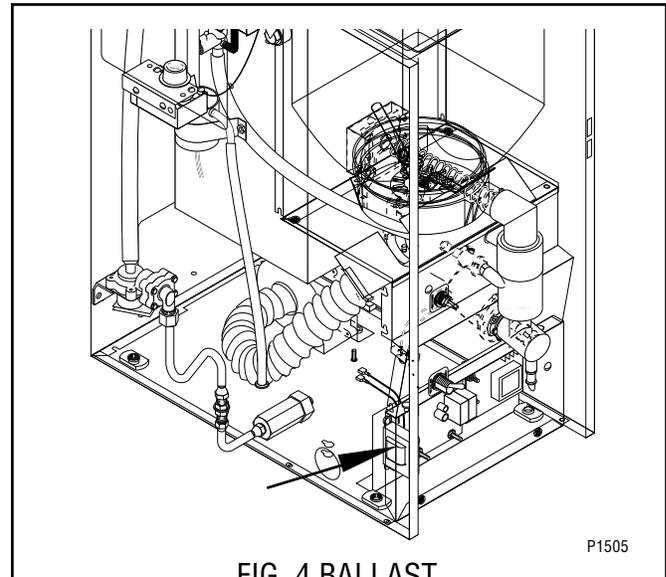

#### Location

The front door lamp ballast is located behind the front access panel on the left side of the component bracket

#### Test Procedure

1. Disconnect the dispenser from the power source.
2. Disconnect the two terminal plug of the door interconnect harness from the main wiring harness.
3. Check the voltage across the white wire and the blue wire terminals of the ballast with a voltmeter. Connect the dispenser to power source. The indication must be:
  - a) 120 volts ac for two wire 120 volt models.
  - b) 120 volts ac for 120/208 volt models or 120/240 volt models.

If voltage is present as described the ballast is operating properly.


If voltage is not present as described, replace the ballast.

#### Removal and Replacement


1. Disconnect the wires from the ballast.
2. Remove the #8-32 keps nuts securing the ballast to the dispenser base.
3. Remove and discard ballast.
4. Install new ballast over the weld pin on the component bracket and secure with one #8-32 screw.
5. Refer to the Fig. 5 when reconnecting the wires.

## SERVICE (cont.)

### BALLAST (cont.)

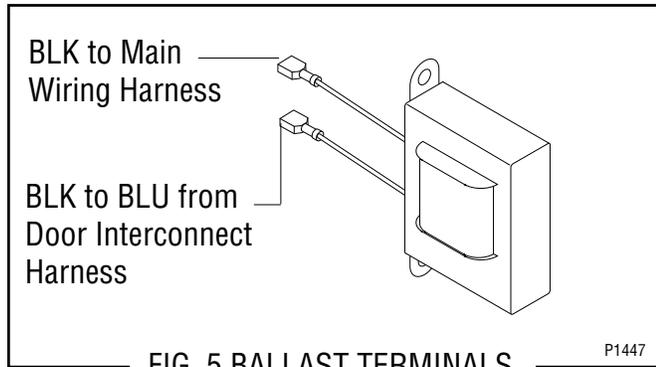

### CONTROL THERMOSTAT

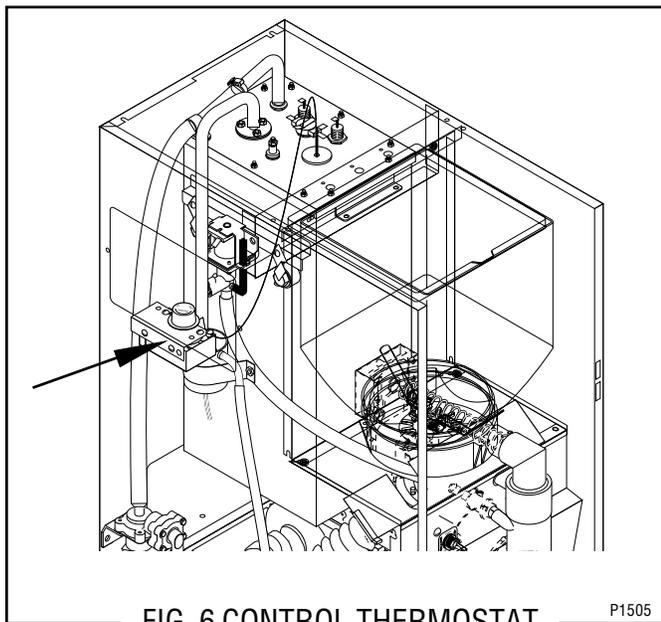

#### Location

The thermostat is located inside the dispenser on the upper left rear side of the housing.

#### Test Procedure

1. Disconnect the dispenser from the power source.
2. Disconnect the black wire of the control thermostat from the black lead from the limit thermostat.
3. Remove bulb from the tank.
4. Check the voltage across black wire on the control thermostat and the white or red wire on the tank heater with the tank heater switch in the "ON" lower position with a voltmeter. Connect the dispenser to the power source. The indication must be:
  - a) 120 volts ac for two wire 120 volt models.
  - b) 120 volts ac for three wire 120/208 volt or 120/240 volt models.


5. Disconnect the dispenser from the power source.

If voltage is present as described the control thermostat is operating properly. Reinstall bulb into the tank. If voltage is not present as described, replace the thermostat.

#### Removal and Replacement.

1. Disconnect the wires from the thermostat.
2. Remove the thermostat capillary bulb by firmly pulling-up on the capillary at the tank lid. This will disengage the grommet from the tank lid.
3. Loosen the two #8-32 screw securing the thermostat to the upper left rear side of the dispenser housing.
4. Remove thermostat bracket and thermostat as an assembly.
5. Remove the two #6-32 screws securing the thermostat to the thermostat bracket and discard thermostat.
6. install new thermostat on the thermostat bracket using two #6-32 screws.
7. Install the thermostat and bracket inside the dispenser housing on the upper left rear side and tighten the two #8-32 screws.
8. Slide the grommet to the line 4.5" above the bulb on the new capillary tube.
9. Insert the capillary bulb through the hole in the tank lid and press the grommet firmly and evenly so that the groove in the grommet fits into the tank lid.
10. Carefully bend the capillary tube so that the tube and bulb inside the tank are in the vertical position and away from any electrical connections.
11. Refer to Fig. 7 and reconnect the wires.

**NOTE** - The capillary tube must be clear of any electrical termination and not kinked.

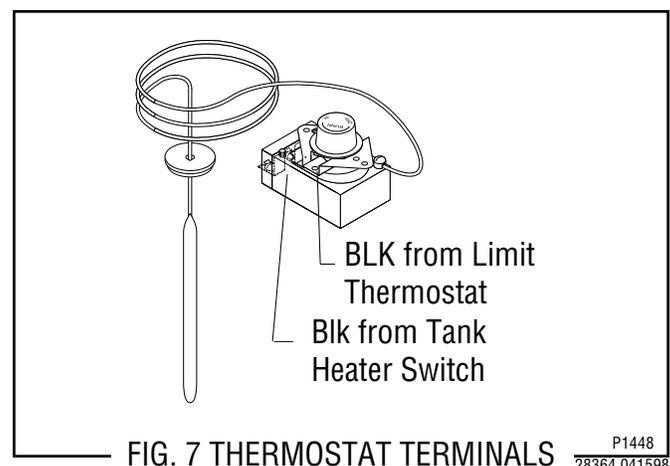

## SERVICE (cont.)

### DISPENSE SWITCH

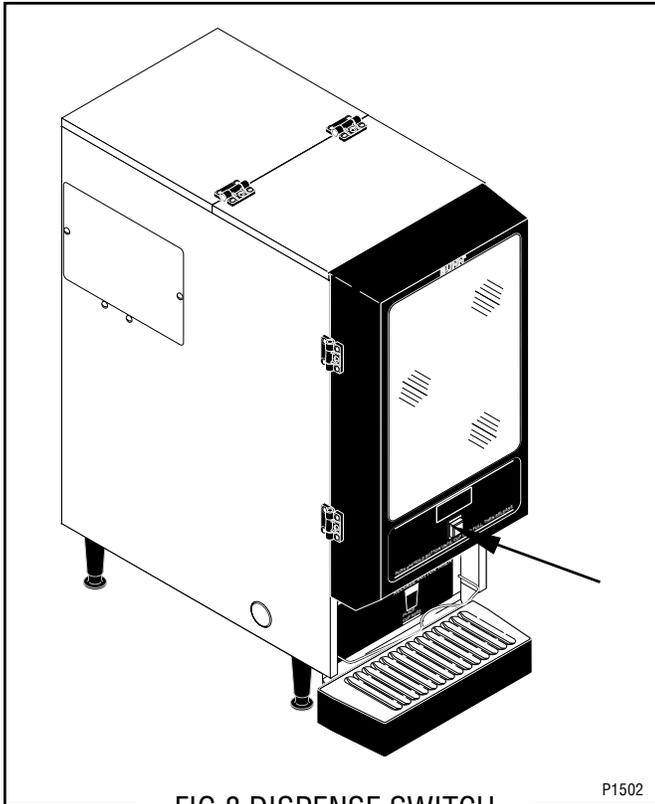


FIG.8 DISPENSE SWITCH

#### Location:

The dispense switch is located on the lower outside center of the dispenser door.

#### Test Procedure:

1. Disconnect the dispenser from the power source.
2. Open the dispenser door and remove the bottom door cover.
3. Disconnect the wires from the door interconnect wiring harness to the dispense switch.
4. Check for voltage across the black wire and the red wire from the door interconnect wiring harness. Connect the dispenser to the power supply. The indication must be:
  - a) 120 volts ac for two wire 120 volt models.
  - b) 120 volts ac for three wire 120/208 volt or 120/240 volt models.
5. Disconnect the dispenser from the power source.

If voltage is present as described, proceed to #6.  
If voltage is not present as described, refer to the wiring diagram and check the dispenser wiring harness.

6. Check for continuity across the terminals with

the switch in the “ON” pressed position. Continuity must not be present when the switch is in the “OFF” released position.

If continuity is present as described, reconnect the connector to the door interconnect wiring harness, the switch is operating properly.

If continuity is not present as described, replace the switch.

#### Removal and Replacement

1. Open the dispenser door.
2. Remove the five #6-32 screws securing the bottom door cover and remove cover.
3. Disconnect the wires on the dispense switch from the door interconnect wiring harness.
4. Compress the clips inside the door on the dispense switch and gently push the switch through the opening
5. Push the new switch into the opening and spread the clips to hold the switch in the door.
6. Reconnect the wires to the dispense switch from the door interconnect wiring harness.
7. Reinstall the door bottom cover using five #6-32 screws.
8. Refer to Fig. 9 when reconnecting wires.

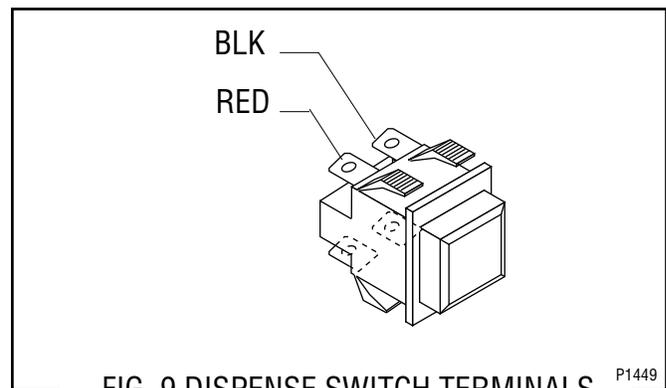


FIG. 9 DISPENSE SWITCH TERMINALS

## SERVICE (cont.)

### FAN

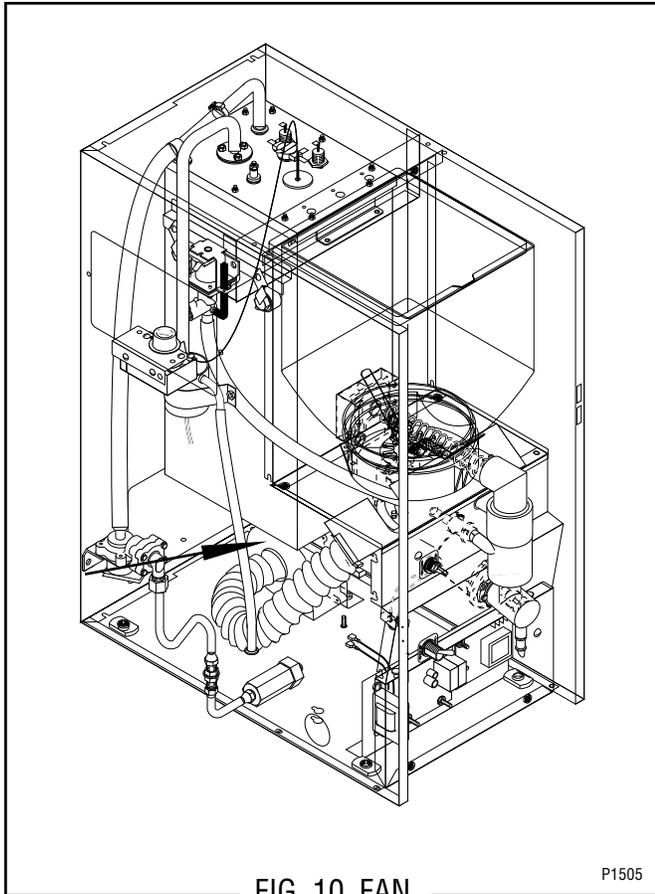


FIG. 10 FAN

P1505

#### Location:

The fan is located inside the dispenser housing on the right rear of the dispenser base plate.

#### Test Procedures:

1. Disconnect the dispenser from the power source.
2. Disconnect the black and white wires from the fan terminals.
3. Check the voltage across the black and white wires on the main harness with a voltmeter. Connect the dispenser to the power source. The indication must be:
  - a) 120 volts ac for two wire 120 volts models.
  - b) 120 volts ac for three wire 120/208 volt or 120/240 volt models.

If voltage is present as described, replace the fan  
If voltage is not present as described, refer to wiring diagram and check the dispenser wiring harness.

#### Removal and Replacement:

1. Disconnect the vacuum hose from the fan.
2. Remove the two #8-32 locking screws securing the fan to the dispenser housing base plate.
3. Disconnect the wires from the fan terminals and discard the fan
4. Refer to Fig. 11 and connect the wires to the new fan.
5. Install new fan through the rear access hole and secure to the dispenser housing base plate using two #8-32 locking screws.
6. Reconnect the vacuum hose to the fan.

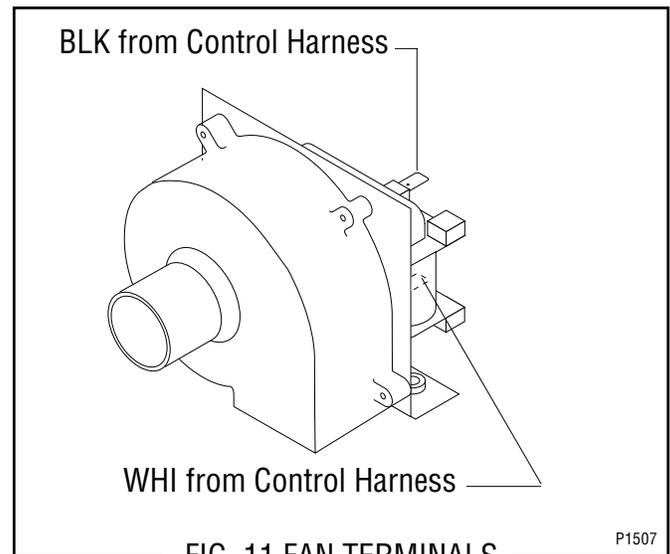


FIG. 11 FAN TERMINALS

P1507

## SERVICE (cont.)

### FROTHER AND WHIPPER MOTOR

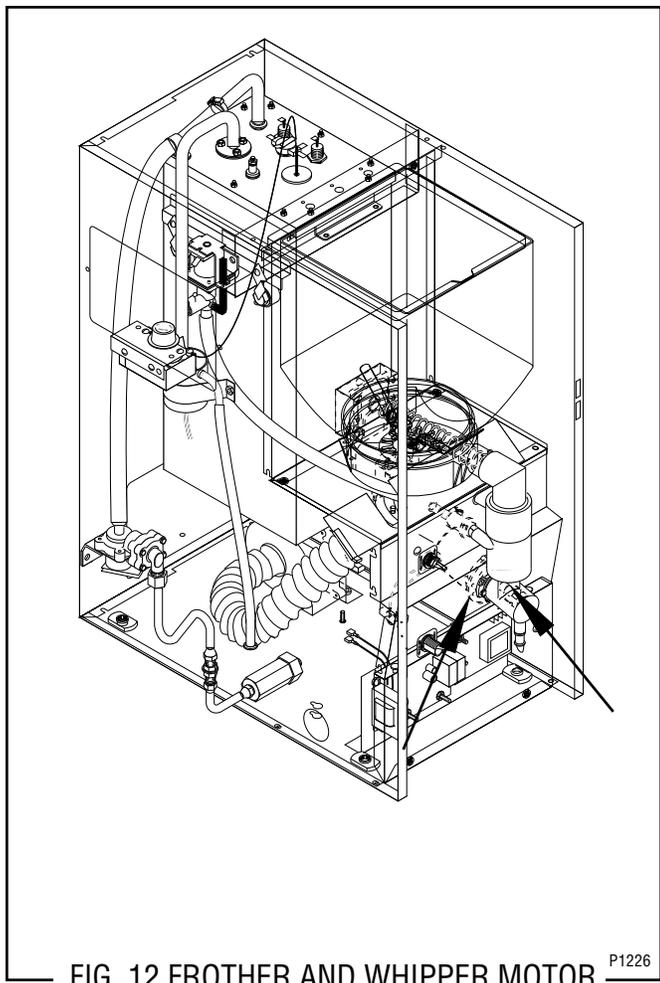


FIG. 12 FROTHER AND WHIPPER MOTOR

#### Location:

The frother is located behind the dispenser door, mounted on the front panel inside the whipper chamber.

The whipper motor is located on the back side of the whipper motor mounting panel

#### Test Procedure:

1. Disconnect the dispenser from the power source.
2. Disconnect the white/red and white wires of the main harness from the black leads of the motor.
3. Press and hold the dispense switch and check the voltage across the disconnected harness wires with a voltmeter. Connect the dispenser to the power source. The reading must be:
  - a) 120 volts ac for two wire 120 volt models.
  - b) 120 volts ac for three wire 120/208 volt or 120/240 volt models.
4. Disconnect the dispenser from the power source.

If voltage is present as described, replace the motor. If voltage is not present as described, refer to the wiring diagrams and check the dispenser wiring harness.

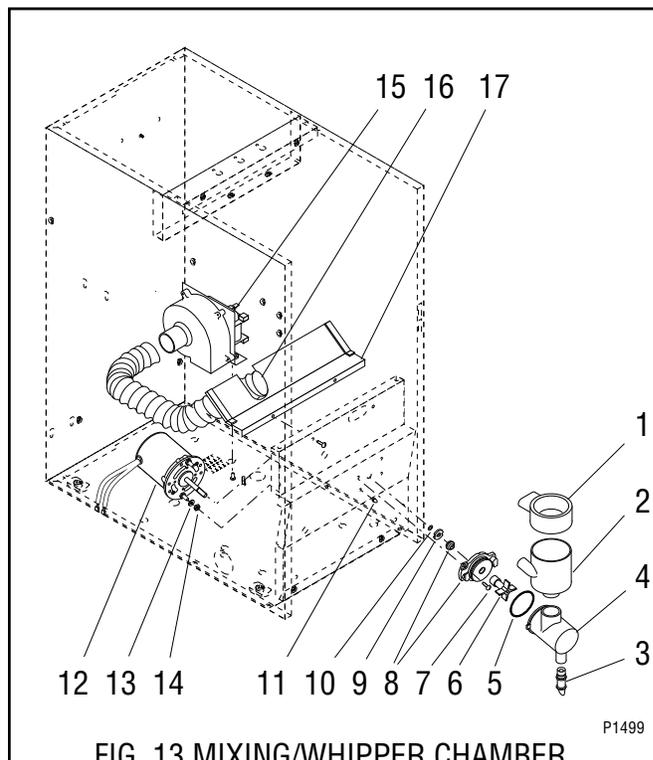


FIG. 13 MIXING/WHIPPER CHAMBER COMPONENTS

- |                      |                     |
|----------------------|---------------------|
| 1. Steam Collector   | 10. O-Ring          |
| 2. Mixing Chamber    | 11. #8-32 Acorn Nut |
| 3. Dispense Tip      | 12. Motor Assy.     |
| 4. Whipper Chamber   | 13. Washer          |
| 5. O-Ring            | 14. Nut             |
| 6. Frother           | 15. Fan             |
| 7. #6-32 Screw       | 16. Vacuum Hose     |
| 8. Receptical w/Seal | 17. Baffle          |
| 9. Teflon Washer     |                     |


#### Removal, Cleaning and Replacement (Refer to Fig. 13)

1. Open the dispenser door and raise the top front cover.
2. Lift the hopper assembly over the pin on the hopper support panel and slide hopper assembly out the front of the dispenser. Set aside for reassembly.
3. Remove the four #8-32 screws securing the hopper support panel to auger motor mounting panel and the whipper motor mounting panel. Set aside for reassembly.

## SERVICE (cont.)

### FROTHER AND WHIPPER MOTOR (cont.)

4. Disconnect vacuum hose (16) from fan baffle (17).
5. Remove the steam collector (1) by pulling it forward and at the same time twisting it clockwise.
6. Pull the mixing chamber (2) out of the whipper chamber (4).
7. Remove dispense tip (3) and twist the whipper chamber (4) clockwise and pull it off the whipper chamber receptacle (8).
8. Pull the frother (6) off the motor shaft. Notice the flat side on the shaft and the matching flat inside the frother. It is important that these two flats are lined up when reassembling.
9. Slip the O-ring (5) off the whipper chamber receptical (8).
10. Remove the two #6-32 screws (7) securing whipper chamber receptical (8) to the front panel.
11. Slide the receptical w/seal off of the motor shaft.
12. Slide teflon washer (9) and O-ring (10) off of the motor shaft.
13. Remove the two #4-40 x .25" screws securing the fan baffle(17) to the whipper motor mouting panel and remove fan baffle. Set aside for reassembly.
14. Disconnect the black leads on the whipper motor (12) from the main wiring harness.
15. Remove the two #8-32 acorn nuts (11) securing the motor (12) to the rear of front panel.
16. Remove motor and discard.
17. Install new motor (12) on rear of front panel and secure with two #8-32 acorn nuts (11) and connect black leads on the motor to the main wiring harness. Refer to Fig. 14 when reconnecting wires
18. Slide O-ring (10) onto the motor shaft to approximately 1/16" of the front panel.
19. Wash remaining components in a mild solution of dish detergent using a bristle brush.
20. Rinse thoroughly and allow to dry before reinstalling in the dispenser.
21. Place teflon washer into back opening of whipper chamber receptical and align one notch with bump in the opening.
22. Slide whipper chamber receptacle w/seal on to the motor shaft and secure to the front panel using two #6-32 screws (7).
23. Slip O-ring (5) onto the whipper chamber receptical
- (8).
24. Push frother (6) onto the motor shaft, making sure the flat in the frother (6) lines up with the flat on the motor shaft.
25. Install whipper chamber (4) on the whipper chamber receptical (8) by twisting counterclockwise until the tabs on the whipper chamber (4) lock with the tabs on the whipper chamber receptical (8). Be sure dispense port is pointing down.
26. Install dispense tip (3) into the bottom of the whipper chamber (4). Be sure the cutout part of the dispense tip is facing the outside of the dispenser.
27. Using two #4-40 screws secure the fan baffle to the whipper motor mounting panel.
28. Install vacuum hose (16) on fan baffle (17).
29. Install hopper support panel using four #8-32 screws.
30. Slip the mixing chamber (2) onto the mixing chamber water inlet tube far enough so the mixing chamber (2) will seat inside the whipper chamber (4).
31. Install the steam collector (1) onto the mixing chamber (2) by pushing down and toward the dispenser while twisting until the flange on the steam collector lines-up with the slot in the front panel.
32. Install hopper assembly in the dispenser by sliding hopper assembly on the hopper support panel until the slot in the bottom rear of the hopper seats against the shoulder screw in the hopper support panel and pins in the hopper support panel.

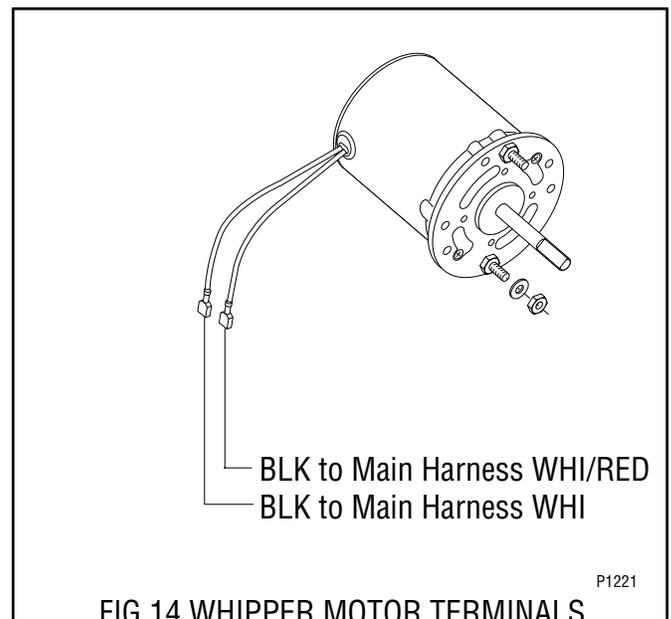

## SERVICE (cont.)

### HOPPER DELAY BOARD

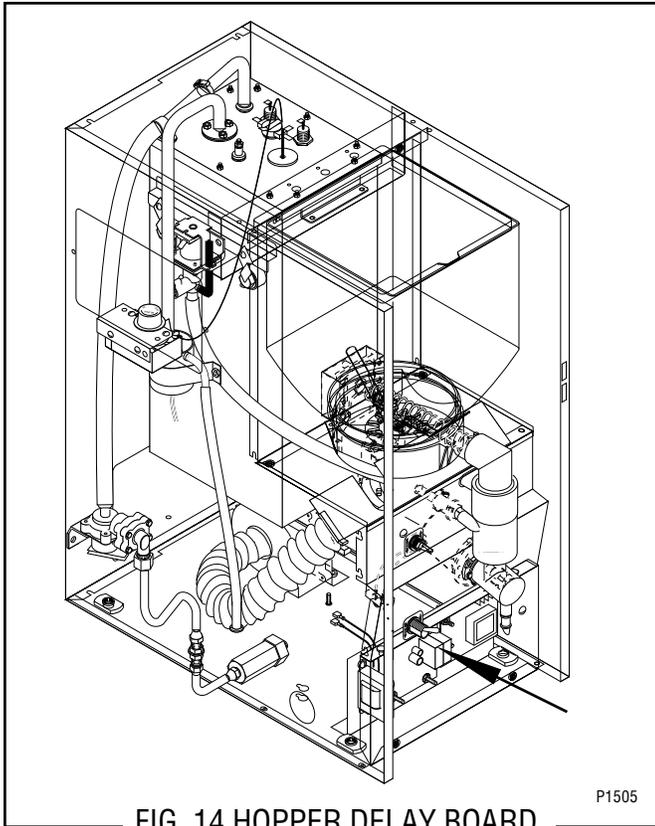


FIG. 14 HOPPER DELAY BOARD

#### Location

The hopper delay board is located behind the lower front access panel mounted in the center of the component bracket.

#### Test Procedures:

1. Disconnect the dispenser from the power source.
2. Disconnect the eight pin plug on the main wiring harness from the eight pin connector on the hopper delay board.
3. With the rinse/run switch in the "Run", lower position, check the voltage across the white wire (#8 terminal) and black wire (#4 terminal) of the main wiring harness with a voltmeter. Connect the dispenser to the power source. The indication must be:
  - a) 120 volts ac for two wire 120 volt models.
  - b) 120 volts ac for three wire 120/208 volt or 120/240 volt models.
4. Disconnect the dispenser from the power source.

If voltage is present as described, proceed to #5.  
If voltage is not present as described, refer to the wiring diagram and check the dispenser wiring harness.

5. Reconnect the eight pin connector of the main wiring harness to the hopper delay board.
6. Check the voltage across the terminals on the auger motor with a voltmeter. Press and hold the dispense switch. Connect the dispenser to the power source. After a delay of .7 seconds the indication must be:
  - a) 120 volts ac for two wire 120 volt models.
  - b) 120 volts ac for three wire 120/208 volt or 120/240 volt models.
7. Disconnect the dispenser from the power source.


If voltage is present as described the hopper delay board is operating properly.  
If voltage is not present as described, replace the hopper delay board.

#### Removal and Replacement:

1. Disconnect the eight pin plug from the hopper delay board.
2. Remove the two #8-32 keps nuts securing the hopper delay board to the component bracket.
3. Remove hopper delay board and discard.
4. Install new hopper delay board on the component bracket using two #8-32 keps nuts.
5. Reconnect the eight pin connector to the hopper delay board.

## SERVICE (cont.)

### LAMP HOLDER

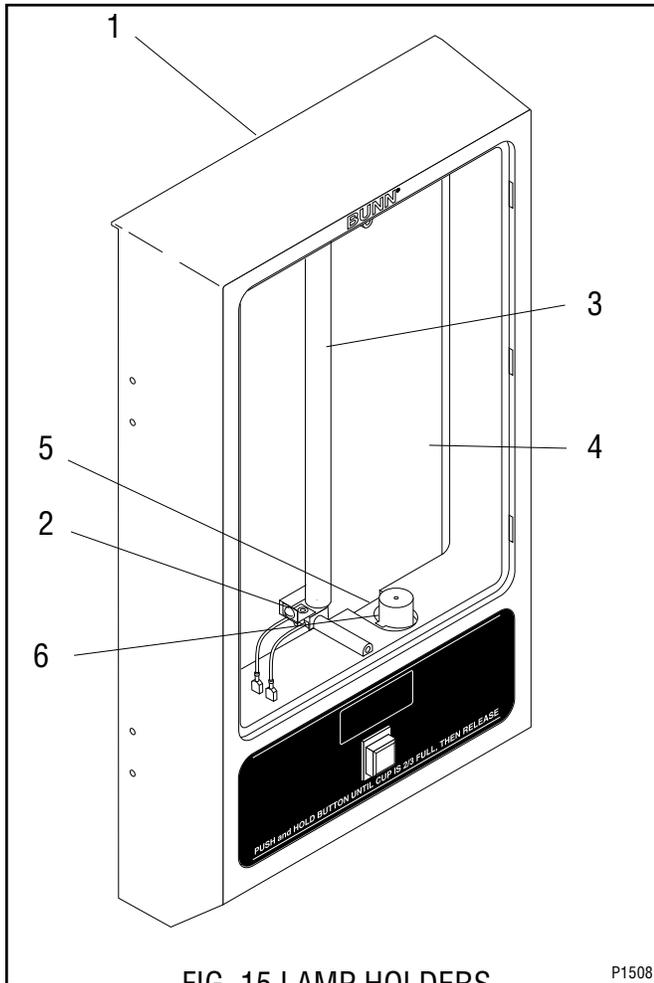

- |                 |                     |
|-----------------|---------------------|
| 1. Door Assy    | 4. Upper Panel      |
| 2. Lamp Holders | 5. Lower Panel      |
| 3. Lamp         | 6. Starter W/Socket |

#### Location:

The lamp holders are located on the front of the upper panel behind the display panel.

#### Test Procedure:

1. Disconnect the dispenser from the power source.
2. Remove upper door panel (4) and disconnect the door wiring harness from the leads on the lamp holders.
3. Remove lamp from lamp holders.
4. Check for continuity on each lead of the lamp holders.

If continuity is present as described, lamp holders are operating properly.

If continuity is not present as described replace the lamp holder.

#### Removal and Replacement:

1. Open dispenser door (1).
2. Remove the five #6-32 screws securing lower door panel (5) to the door (1) and remove cover.
3. Disconnect the door wiring harness from the door interconnect wiring harness.
4. Remove five #6-32 screws securing the upper door panel (4) to the door.
5. Remove the upper door cover (4), lamp (3), lamp holders (2) and door wiring harness as an assembly.
6. Disconnect the wires from the lamp holder to be replaced from the door wiring harness.
7. Rotate lamp (3) 90° and remove from lamp holders (2).
8. Remove the #6-32 screw securing the lamp holder (2) to be removed, remove lamp holder (2) and discard.
9. Install new lamp holder (2) and secure with a #6-32 screw.
10. Connect the wires on the new lamp holder to the door wiring harness.
11. Install lamp (3) into lamp holders (2) and turn 90° until the pins snap in place.
12. Install upper door panel (4), lamp (3), lamp holders (2) and door wiring harness as an assembly using five #6-32 screws.
13. Reconnect the plug on the door wiring harness to the connector on the door interconnect wiring harness.
14. Install the door lower panel (5) using five #6-32 screws.

#### **LAMP REPLACEMENT (Refer to Fig. 15)**

1. Remove the outside window and display graphic.
2. Remove the two #4-40 screws securing the inside window to the door and remove window.
3. Rotate lamp (3) 90° and remove from the lamp holders (2).
4. Insert new lamp (3) into lamp holders (2) and turn 90° until the pins snap in place.
5. Using two #4-40 screws secure the inside window to the door.
6. Install outside window and slide display graphic down between the inside window and the outside window.

## SERVICE (cont.)

### LAMP STARTER and SOCKET (Refer to Fig. 15)

#### Location:

The lamp starter (6) is located inside the door assy (1) on the top of the door lower panel (5).

#### Test Procedures:

1. Disconnect the dispenser from the power source.
2. Disconnect the starter leads from the door wiring harness.
3. Remove lamp starter from starter socket.
4. Check for continuity on each lead of the starter socket.

If continuity is present as described the starter socket is operating properly.

If continuity is not present as described replace the starter socket.

5. Remove starter (6) from starter socket.
6. Check for continuity across the pins on the bottom of the starter (6).

If continuity is present as described, replace the starter. If continuity is not present as described, starter is operating properly.

**Note:** If continuity tests are both as described and lamp does not light, replace the starter socket.

#### Removal and Replacement (Refer to Fig.15):

1. Open dispenser door assy (1)
2. Remove the five #6-32 screws securing the door lower panel (5) to the door assy (1).
3. Disconnect the leads on the starter socket from the door wiring harness.
4. Remove lower door panel (5) and starter w/socket (6) as assembly.
5. Compress the spring tabs on the socket and remove socket from the door bottom cover (5).
6. Rotate starter 90° and remove from the starter socket.
7. Insert new starter (6) into socket and turn 90° until the pins snap in place.
8. Install new socket by compressing spring tabs on the socket and pushing the socket up through the hole in the lower door panel (5) and releasing spring tabs.
9. Connect the sockets leads to the door wiring harness.

10. Install door lower panel (5) with starter and starter socket on door assy (1) using five #6-32 screws.

### LEVEL CONTROL BOARD AND LEVEL PROBE

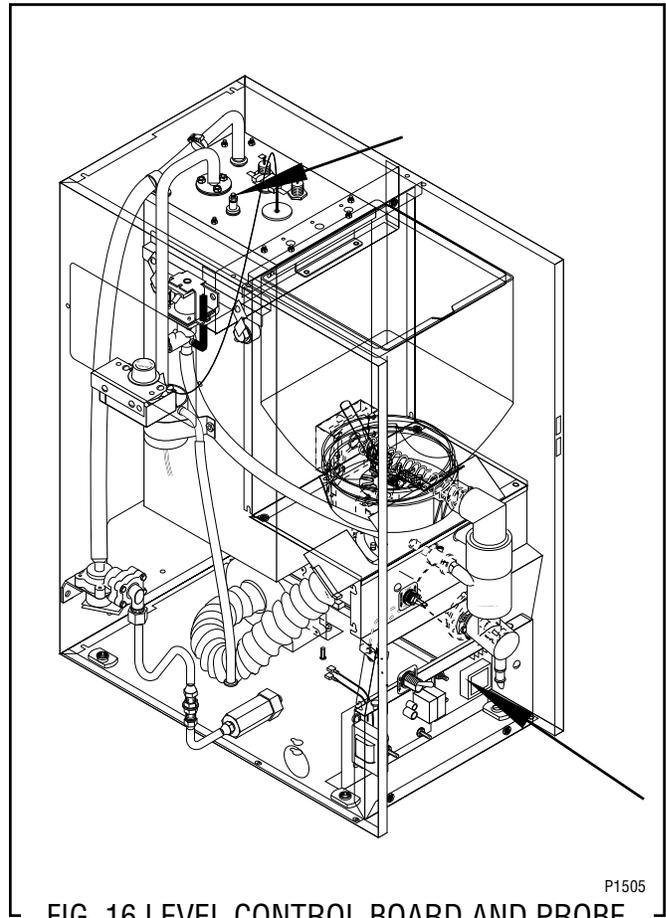


FIG. 16 LEVEL CONTROL BOARD AND PROBE

#### Location:

The level control board is located behind the lower access panel mounted on the right side of the component bracket.

The Level probe is located on the left center of the tank lid just in front of the overflow tube.

#### Test Procedure:

1. Disconnect the dispenser from the power source.
2. Remove the violet wire from terminal 1 & pink wire from terminal 4 of the circuit board.
3. Check the voltage across terminals 2 & 3 with a voltmeter. Connect the dispenser to the power source. The indication must be 120 volts ac for two wire 120 volt models, three wire 120/208 volt models, three wire 120/240 volt models.
4. Disconnect the dispenser from the power source.

## SERVICE (cont.)

### LEVEL CONTROL BOARD AND LEVEL PROBE (cont.)

If voltage is present as described, proceed to #5.  
If voltage is not present as described, refer to the wiring diagram and check the dispenser wiring harness.

5. Reconnect the violet wire to terminal 1.
6. Carefully connect a piece of insulated jumper wire to terminal 4. Keep the other end of this wire away from any metal surface of the dispenser.
7. Check the voltage across terminals 1 & 3 with a voltmeter. Connect the dispenser to the power source. The indication must be 120 volts ac for two wire 120 volt models, three wire 120/208 volt models, three wire 120/240 volt models after a delay of approximately 5 seconds.
8. Touch the free end of jumper wire to the component bracket. The indication must be 0.
9. Move the jumper wire away from the component bracket. The indication must again be 120 volts ac for two wire 120 volt models, three wire 120/208 volt models, three wire 120/240 volt models after a delay of approximately 5 seconds.
10. Disconnect the dispenser from the power source and remove the jumper wire from terminal 4.

If voltage is present as described, the level control board is operating properly, proceed to #11.  
If voltage is not present as described, replace the level control board.

11. Reconnect the pink wire to terminal 4.
12. Gently pull the probe out of the tank lid and inspect for corrosion. Replace it if necessary.
13. Place the probe so that neither end is in contact with any metal surface of the dispenser.
14. Check the voltage across terminals 1 & 3 with a voltmeter. Connect the dispenser to the power source. The indication must be 120 volts ac for two wire 120 volt models, three wire 120/208 volt models, three wire 120/240 volt models and 240 volts ac for two wire 240 volt models after a delay of approximately 5 seconds.
15. Move the probe's flat end to the tank. The indication must be 0.
16. Move the probe's flat end away from the tank. The indication should again be 120 volts ac for two

wire 120 volt models, three wire 120/208 volt models, three wire 120/240 volt models after a delay of approximately 5 seconds.

If voltage is present as described, reinstall the probe, the level control board and level probe are operating properly.

If voltage is not present as described, check the pink probe wire for continuity.

#### Removal and Replacement:

1. Remove all wires from the level control board.
2. Remove two #8-32 keps nuts holding level control board to right side of the component bracket.
3. Remove level control board and spacers.
3. Install the new level control board and spacers to the right side of the component bracket using two #8-32 keps nuts.
4. Refer to Fig. 17 when reconnecting the wires.

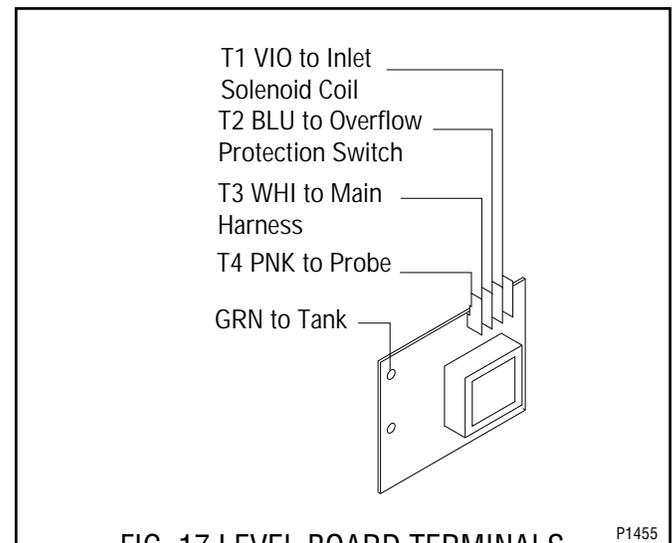


FIG. 17 LEVEL BOARD TERMINALS

P1455

## SERVICE (cont.)

### LIMIT THERMOSTAT

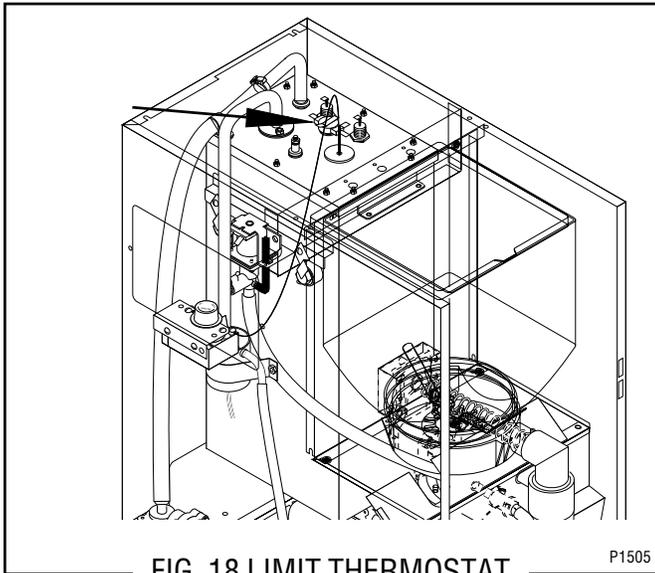


FIG. 18 LIMIT THERMOSTAT

#### Location:

The limit thermostat is located in the center of the tank lid.

#### Test Procedures:

1. Disconnect the dispenser from the power source.
2. Disconnect both black wires from the limit thermostat.
3. Check for continuity across the limit thermostat terminals.

If continuity is present as described, the limit thermostat is operating properly.

If continuity is not present as described, replace the limit thermostat.

#### Removal and Replacement:

1. Remove all wires from the limit thermostat terminals.
2. Carefully slide the limit thermostat out from under the retaining clip and remove the limit thermostat.
3. Carefully slide the new limit thermostat into the retaining clip.
4. Refer to Fig. 19 when reconnecting the wires.

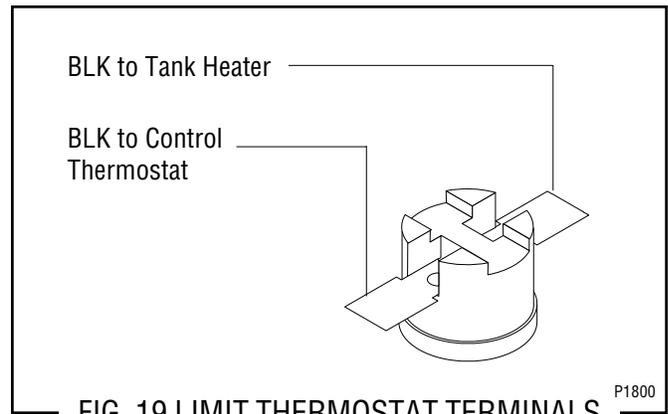


FIG. 19 LIMIT THERMOSTAT TERMINALS

### OVERFLOW PROTECTION SWITCH

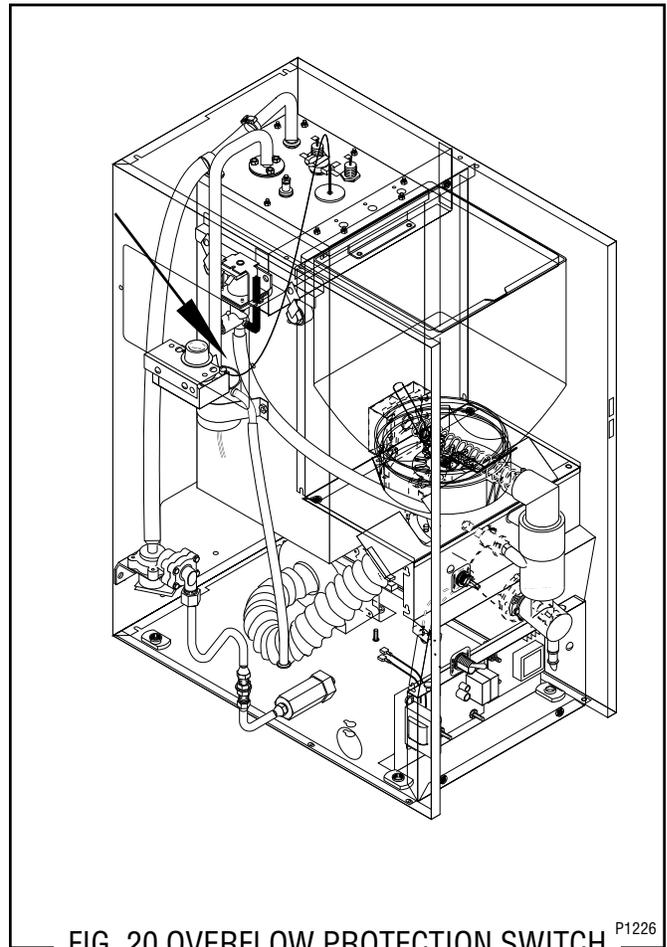


FIG. 20 OVERFLOW PROTECTION SWITCH

#### Location:

The overflow protection switch is located inside the copper overflow cup on the left side of the tank.

#### Test Procedures:

1. Disconnect the dispenser from the power source.
2. Remove the wire nuts connecting the red wires from the overflow protection switch to the black

## SERVICE (cont.)

### OVERFLOW PROTECTION SWITCH (cont.)

wire from the main harness and blue wire from the liquid level board.

3. Check for continuity across the safety overflow switch red wires only until the plastic float is raised and check that continuity returns when the plastic float is again lowered.

If continuity is present as described, reconnect the red wires to the black wire from the main harness and the blue wire from the liquid level board.

If continuity is not present as described, replace the overflow protection switch.

#### Removal and Replacement:

1. Disconnect the red leads from the overflow protection switch from the black wire from the main harness and the blue wire from the liquid level board.
2. Remove the nut beneath the copper overflow cup.
3. Remove the entire switch assembly from the cup.
4. Place the new switch assembly into the cup, wires first. Make sure that a gasket is in place around the threaded switch stem.

**NOTE** - The magnets must be at the top of float and there must be NO adjusting washers installed for the overflow protection switch to operate properly.

5. Install the nut beneath the copper overflow cup. Be sure not to overtighten.
6. Refer to Fig. 21 when reconnecting wires.

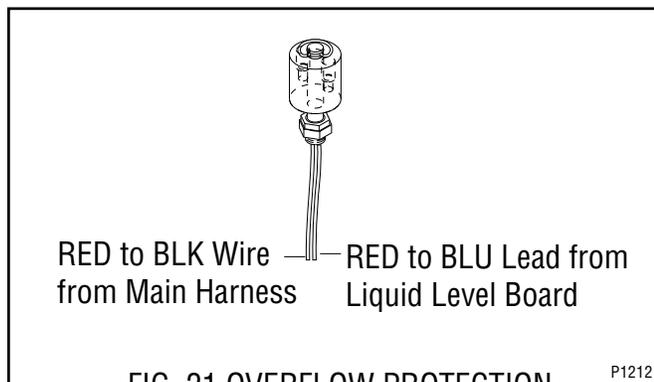


FIG. 21 OVERFLOW PROTECTION SWITCH LEADS

## RUN/RINSE SWITCH

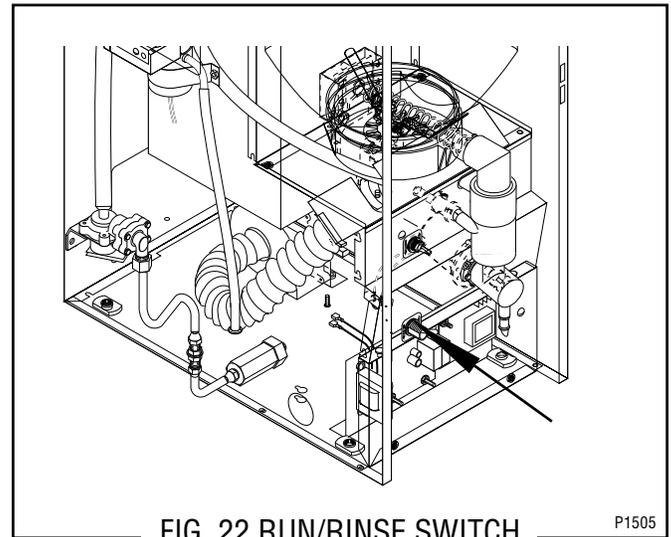


FIG. 22 RUN/RINSE SWITCH

#### Location:

The run/rinse switch is located in the center of the whipper motor mounting panel.

#### Test Procedures:

1. Disconnect the dispenser from the power source.
2. Check for continuity between center terminals and the upper terminals with the switch in the "RUN" lower position. Continuity must not be present with the switch in the "RINSE" upper position.

If continuity is present as described, the switch is operating properly.


If continuity is not present as described, replace the switch.

#### Removal and Replacement:


1. Open the dispenser door.
2. Remove the facenut securing the run/rinse switch to the dispenser front panel.
3. Remove switch with wires attached from the back side of the front panel.
4. Disconnect the wires from the switch and discard the switch.
5. Refer to Fig. 23 when connecting wires to the new switch.
6. Install new switch with wires attached through the hole in the front panel and secure with facenut.

## SERVICE (cont.)

### RUN/RINSE SWITCH (cont.)

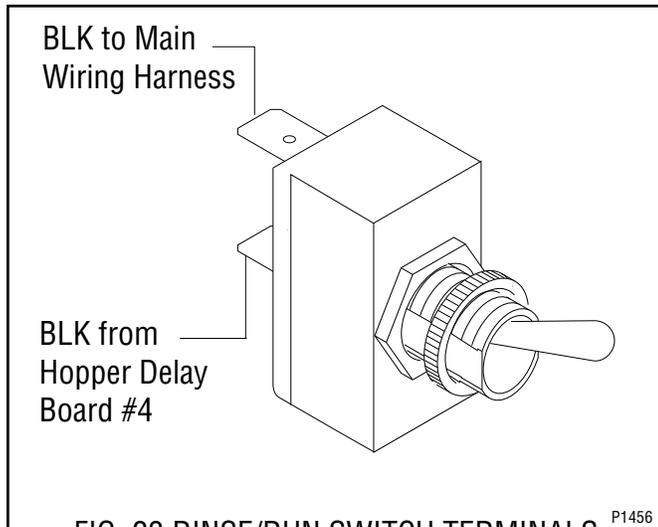

### SOLENOID VALVE (DISPENSE)

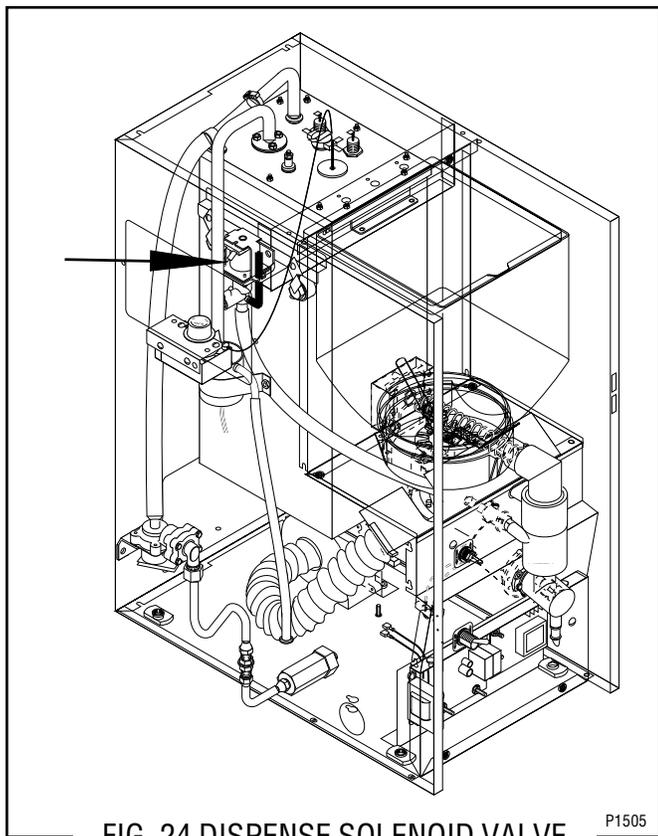

#### Location:

The dispense solenoid is located on the upper left center of the tank.

#### Test Procedures:

1. Disconnect the dispenser from the power source.
2. Disconnect the white and white/red wires from

the solenoid valve. With the "RUN/RINSE" switch in the "RINSE" upper position press the dispense switch on front of the door.

3. Check the voltage across the white and white/red wires with a voltmeter. Connect the dispenser to the power source. The indication must be 120 volts ac for two wire 120 volt models, three wire 120/208 and 120/240 volt models.
4. Disconnect the dispenser from the power source.

If voltage is present as described, proceed to #5  
If voltage is not present as described, refer to wiring diagram and check dispenser wiring harness.

5. Check for continuity across the solenoid valve coil terminals.

If continuity is present as described, reconnect the white and white/red wires to the solenoid.

If continuity is not present as described, replace the solenoid valve.

6. Check the solenoid valve for coil action. Connect the dispenser to the power source. With "RUN/RINSE" switch in the "RINSE" upper position press the dispense switch and listen carefully in the vicinity of the solenoid valve for a "clicking" sound as the coil magnet attracts.
7. Disconnect the dispenser from the power source.

If the sound is heard as described and water will not pass through the solenoid valve, there may be a blockage in the water outlet before the solenoid valve or, the solenoid valve may require inspection for wear, and removal of waterborne particles.

If the sound is not heard as described, replace the solenoid valve.

#### Removal and Replacement:

1. Remove the white and white/red wire from the solenoid valve.
  2. Turn-off the water supply to the dispenser.
  3. Drain enough water from the tank so the water level is below the dispense valve mounting hole.
- NOTE:** Bunn-O-Matic has a syphon assembly, #12440.0000. available for this purpose.
4. Disconnect the water line from the solenoid valve.
  5. Remove the #10-32 screw securing the solenoid valve to side of the tank. Remove solenoid valve.

## SERVICE (cont.)

### SOLENOID VALVE (DISPENSE)

- Using the #10-32 screw install new solenoid valve on side of the tank
- Push the water line onto the tube on bottom of solenoid valve.
- Refer to Fig. 25 when reconnecting the wires.

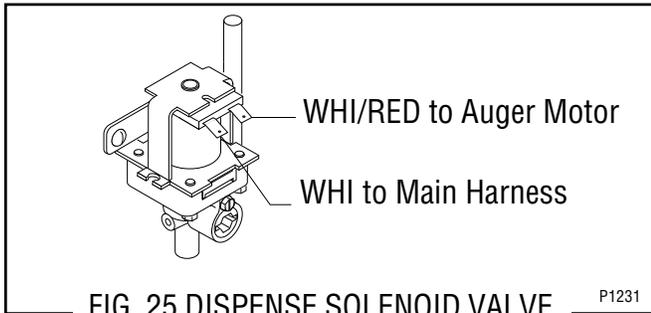


FIG. 25 DISPENSE SOLENOID VALVE  
TERMINALS

### SOLENOID VALVE (INLET)

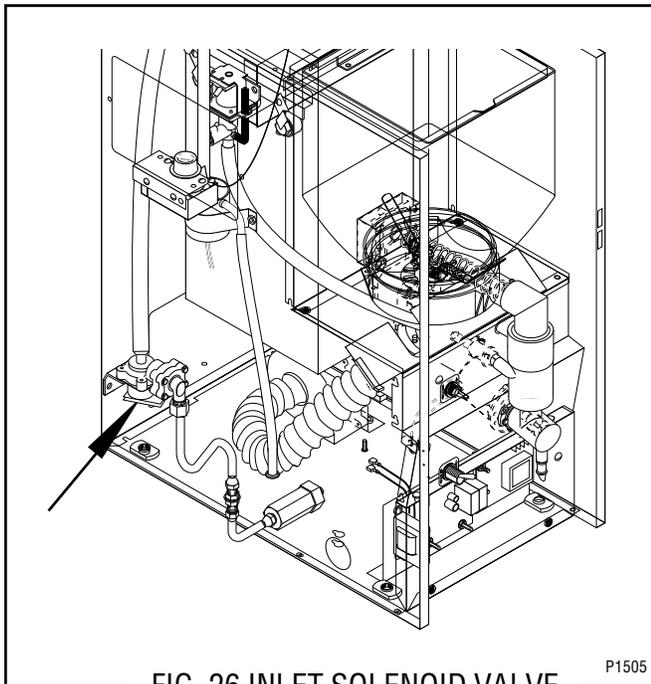


FIG. 26 INLET SOLENOID VALVE

#### Location:

The inlet solenoid is located on the lower right side of the rear panel.

#### Test Procedures:

- Disconnect the dispenser from the power source.
- Disconnect the white and violet wires from the solenoid valve.
- Check the voltage across the white and violet wires with a voltmeter. Connect the dispenser to the power source. The indication must be 120 volts ac

for two wire 120 volt models, three wire 120/208 and 120/240 volt models.

- Disconnect the dispenser from the power source,

If voltage is present as described, proceed to #5  
If voltage is not present as described, refer to the wiring diagram and check dispenser wiring harness.

- Check for continuity across the solenoid valve coil terminals.

If continuity is present as described, reconnect the white and violet wires to the solenoid.  
If continuity is not present as described, replace the solenoid valve.

- Check the solenoid valve for coil action. Connect the dispenser to the power source. Listen carefully in the vicinity of the solenoid valve for a "clicking" sound as the coil magnet attracts.
- Disconnect the dispenser from the power source.

If the sound is heard as described and water will not pass through the solenoid valve, there may be a blockage in the water line before the solenoid valve or, the solenoid valve may require inspection for wear, and removal of waterborne particles.


If the sound is not heard as described, replace the solenoid valve.

#### Removal and Replacement:


- Remove the white and violet wires from the solenoid valve.
- Turn-off the water supply to the dispenser.
- Disconnect the water lines to and from the solenoid valve.
- Remove the two #10-32 screws securing the solenoid to the rear of the dispenser housing. Remove solenoid.
- Remove the two #8-32 U-Type fasteners from the solenoid bracket.
- Install the two #8-32 U-Type fasteners and the two #8-32 screws on the new solenoid.
- Install new solenoid on rear of dispenser housing and tighten the two screws
- Securely fasten the water lines to and from the solenoid valve.
- Refer to Fig. 27 when reconnecting the wires.

## SERVICE (cont.)

### SOLENOID VALVE (INLET)

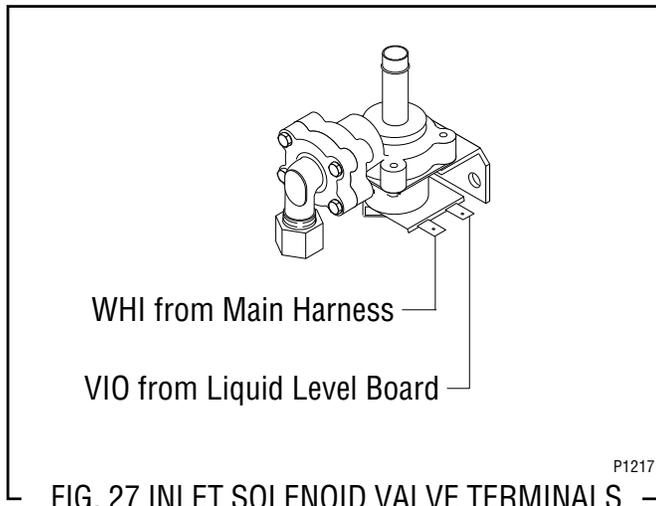

### TANK HEATER

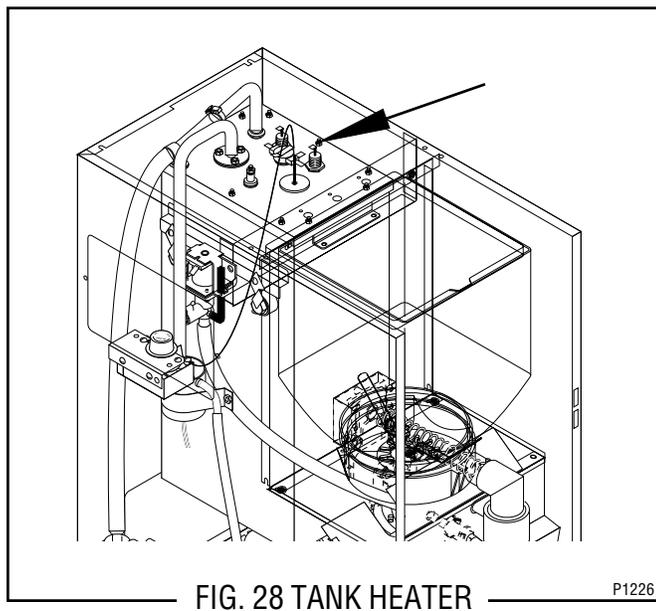

#### Location:

The tank heater is located inside the tank and secured to the tank lid.

#### Test Procedure:

1. Disconnect the dispenser from the power source.
2. Check the voltage across the black and white wires for 120 volt models or black and red wires for 120/208 volt models or 120/240 volt models with a voltmeter. Connect the dispenser to the power source. The indication must be:
  - a) 120 volts ac for two wire 120 volt models;
  - b) 208 volts ac for three wire 120/208 volt models.
  - c) 240 volts ac for three wire 120/240 volt models.

3. Disconnect the dispenser from the power source.

If voltage is present as described, proceed to #4.

If voltage is not present as described, refer to the dispenser wiring diagram and check the wiring harness.

4. Disconnect the black wire and the white or red wire from the tank heater terminals.
5. Check for continuity across the tank heater terminals.

If continuity is present as described, reconnect the wires, the tank heater is operating properly.

If continuity is not present as described, replace the tank heater.

**NOTE** - If the tank heater remains unable to heat, remove and inspect heater for cracks in the sheath.


#### Removal and Replacement:

1. Disconnect the dispenser from the power source.
2. Disconnect the water supply tube on the tank lid.
3. Disconnect the black wires on the limit thermostat.
4. Disconnect the black wire and the white or red wire from the tank heater terminals.
5. Disconnect the pink wire from the liquid level probe and the green wire from the tank.
6. Remove the thermostat capillary bulb by firmly pulling-up on the capillary at the tank lid. This will disengage the grommet from the tank lid.
7. Remove the ten #8-32 nuts securing the tank lid to the tank.
8. Remove tank lid with limit thermostat, liquid level probe and tank heater as an assembly.
9. Remove the two hex nuts securing the tank heater to the tank lid. Remove tank heater with gaskets and discard.
10. Install new tank heater with gaskets on the tank lid and secure with two hex nuts.
11. Install tank lid with limit thermostat, liquid level probe and tank heater on the tank and secure with ten #8-32 hex nuts.
12. Connect water inlet line to the tank lid.
13. Reconnect the black wires to limit thermostat, the pink wire to the liquid level probe and the green wire to the tank. Refer to the limit thermostat and the liquid level board and probe sections in this manual when reconnecting wires.


## SERVICE (cont.)

### TANK HEATER (cont.)

14. Refer to Fig. 29 when reconnecting the wires to the tank heater.

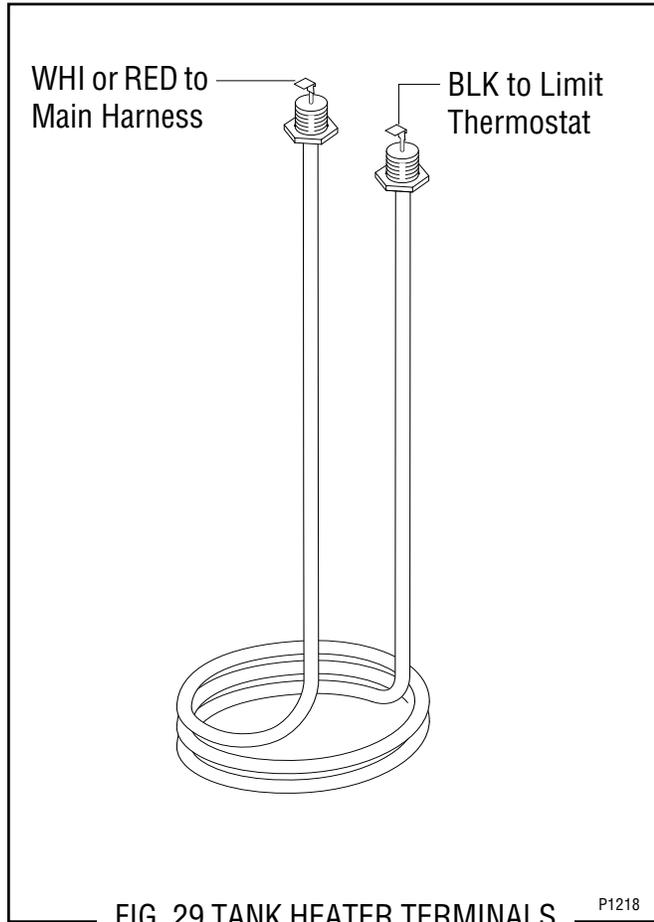

### TANK HEATER SWITCH

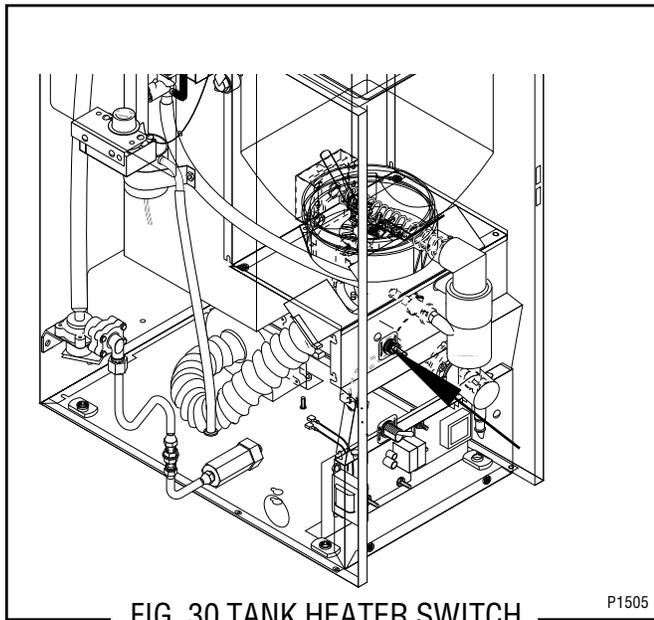

### Location:

The tank heater switch located inside the dispenser on the upper right of the front panel.

### Test Procedure:


1. Disconnect the dispenser from the power source.
2. Disconnect the black wire from the power source and the black wire from the thermostat.
3. With the switch in the "ON" lower position check for continuity between the center and the upper terminal. With the switch in the "OFF" upper position no continuity should be present between center and upper terminals.

If continuity is present as described, the tank heater "ON/OFF" switch is operating properly.


If continuity is not present as described, replace the switch.

### Removal and Replacement:

1. Remove the switch mounting nut on the front of the front panel.
2. Remove switch with wires attached from the rear of the front panel.
3. Remove the wires from the switch terminals and discard switch.
4. Connect the wires to the new switch, refer to fig. 31.
5. Push new switch through hole in the front panel and secure with face nut.

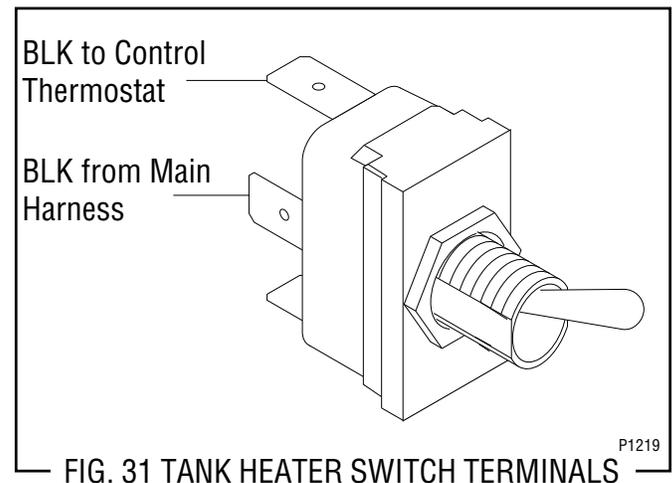

# SCHEMATIC WIRING DIAGRAM

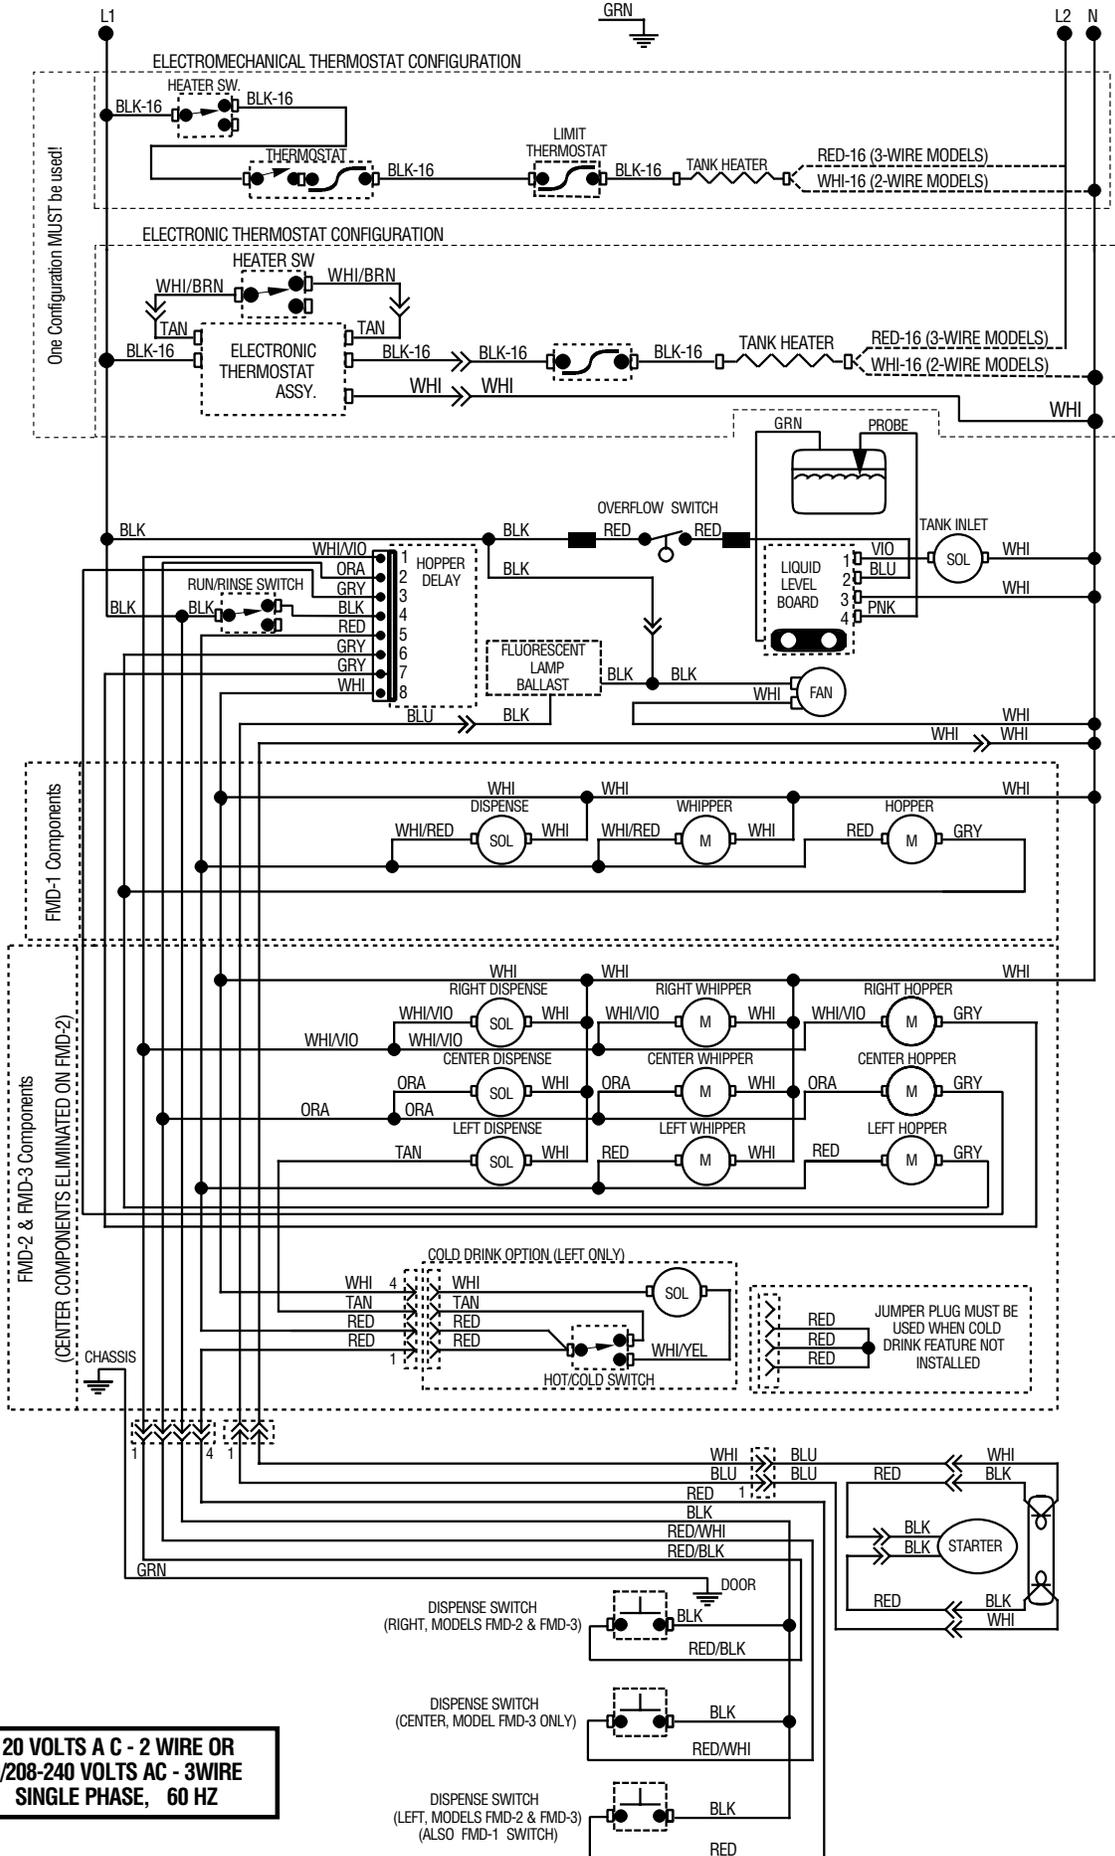

**120 VOLTS A C - 2 WIRE OR  
 120/208-240 VOLTS AC - 3WIRE  
 SINGLE PHASE, 60 HZ**